

VERITY 120° INSTALL FAQ

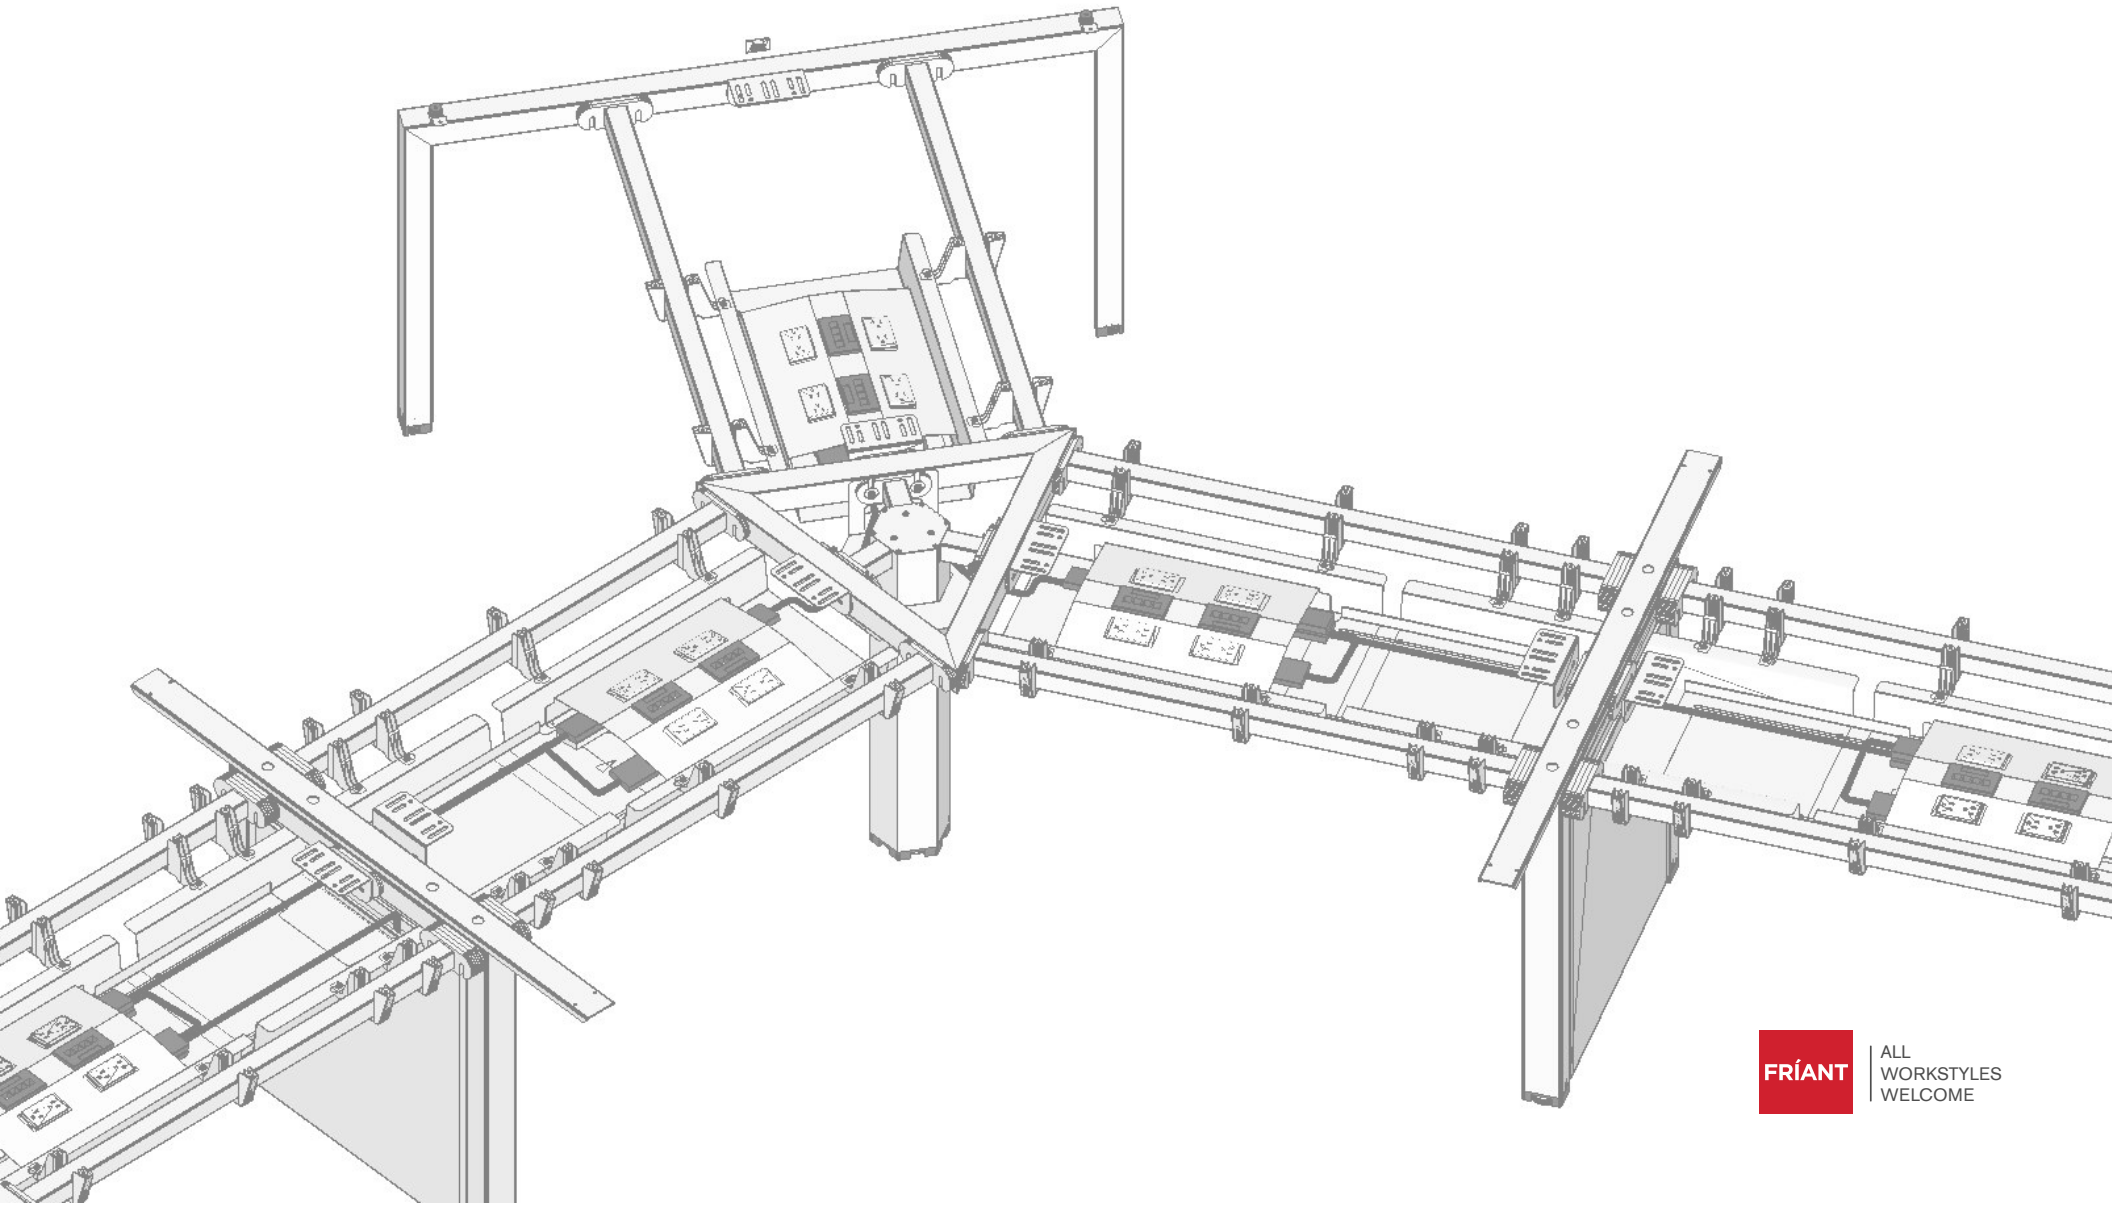 


TABLE OF CONTENTS

Stand Alone Element

Complete Installation Overview	3
--------------------------------------	---

Start/End Element

Structural Overview	4
Beams Overview	5
Stretchers Overview	6
Troughs Overview	7
Power Overview	8
4 Circuit Power Entry 18.....	10
Track Overview	11

Extension Element


Structural Overview	12
Beams Overview	13
Stretchers Overview	14
Troughs Overview	15
Power Overview	16
4 Circuit Power Entry	18
Track Overview	19

Modesty Panel Installation	20
----------------------------------	----

Image Key	21
-----------------	----

Standalone Element 48" shown as example

 Installation Overview

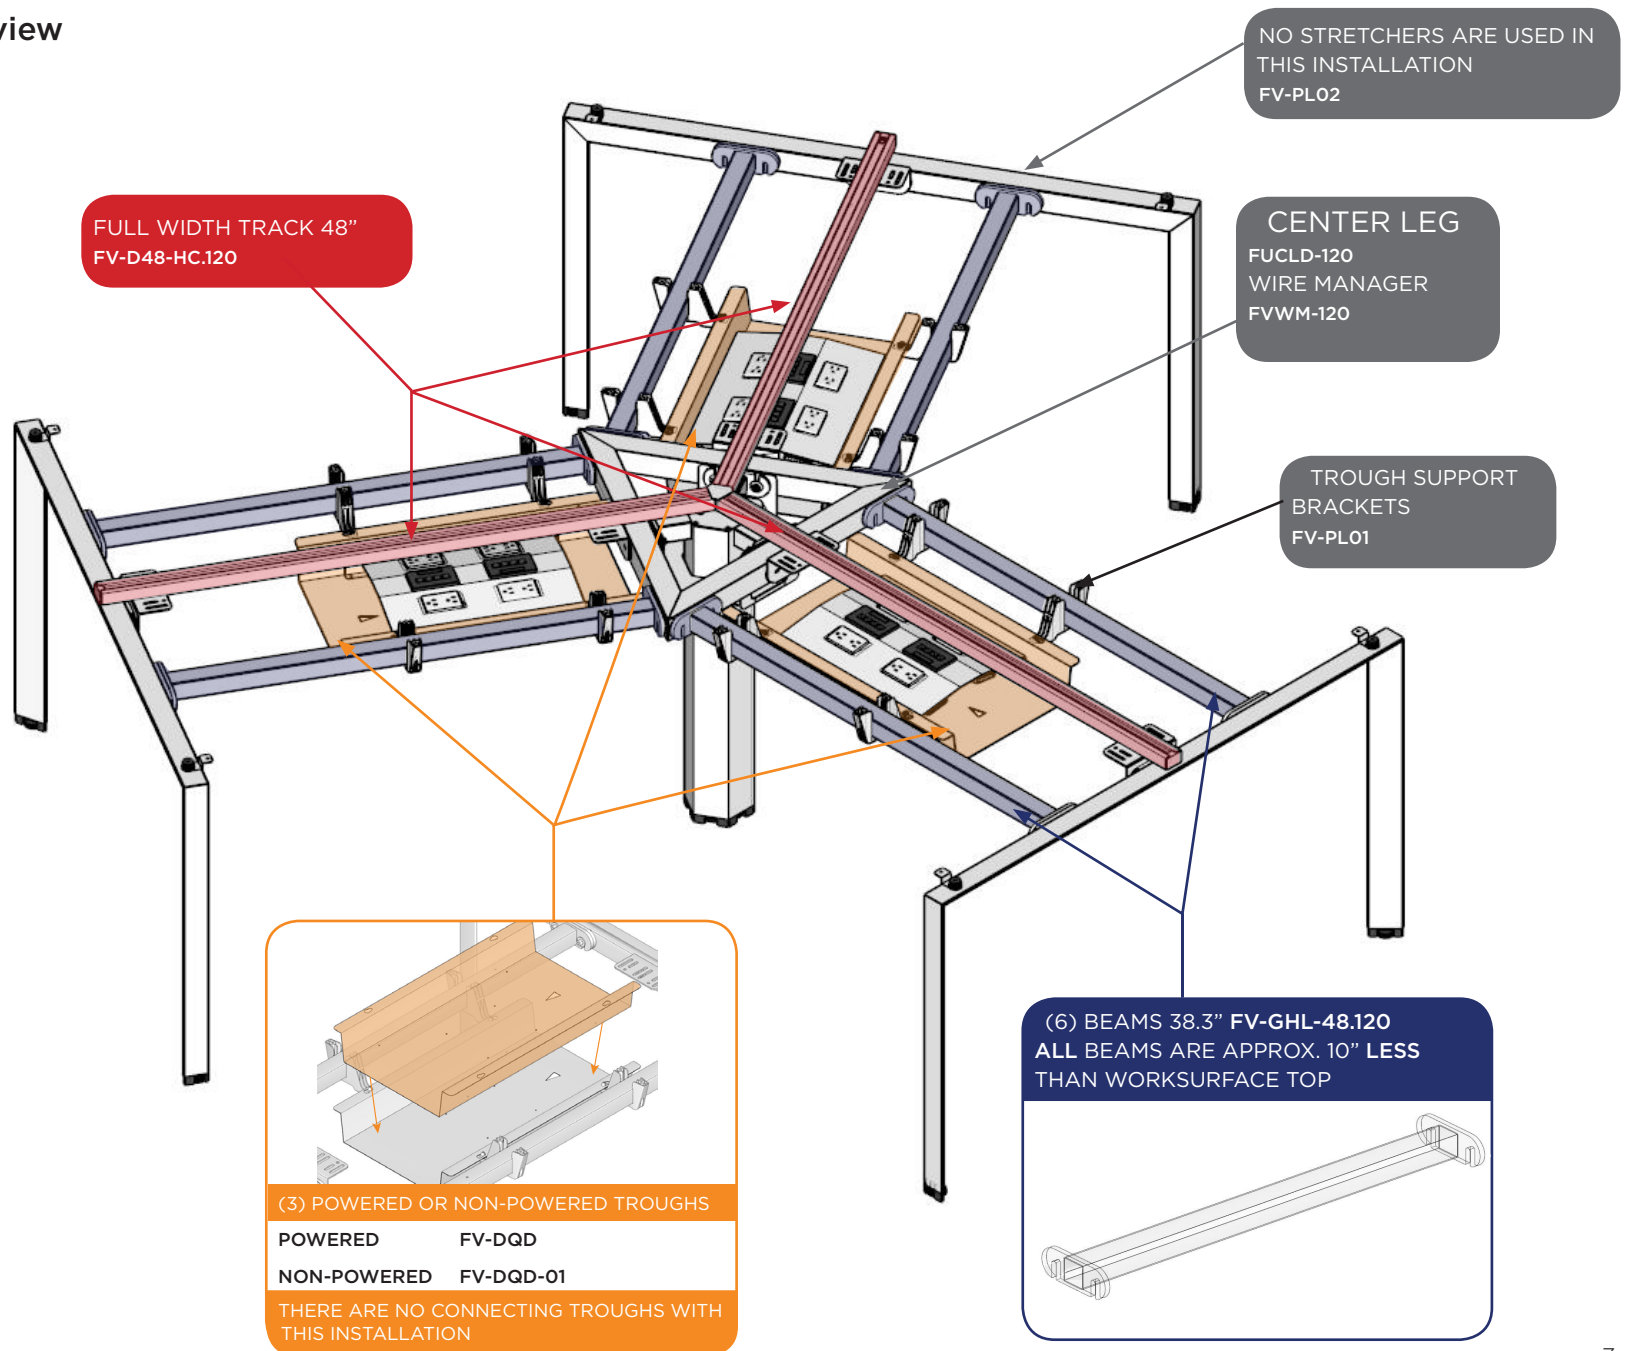

Start/End Element 48" shown as example

Structural Overview

(6) POWERED OR NON-POWERED TROUGHS

POWERED	FV-DQD
NON-POWERED	FV-DQD-01

(2) CONNECTING TROUGHS (FV-DZXDA)
TROUGHS ARE INSTALLED ON THE
INTERIOR OF THE ASSEMBLY **ONLY**

WORKSURFACE
SUPPORT OVERPANEL LEG
FV-GZCB01A

 
NO STRETCHERS ARE
USED IN ATTACHMENT TO
END OF RUN LEGS

(12) BEAMS 38.3" FV-GHL-48.120
ALL BEAMS ARE APPROX. 10" LESS
THAN WORKSURFACE TOP


(8) STRETCHERS
(2) USED AT EACH INTERIOR BEAM
ATTACHMENT (FV-PL02)

Start/End Element 48" shown as example

Beams Overview

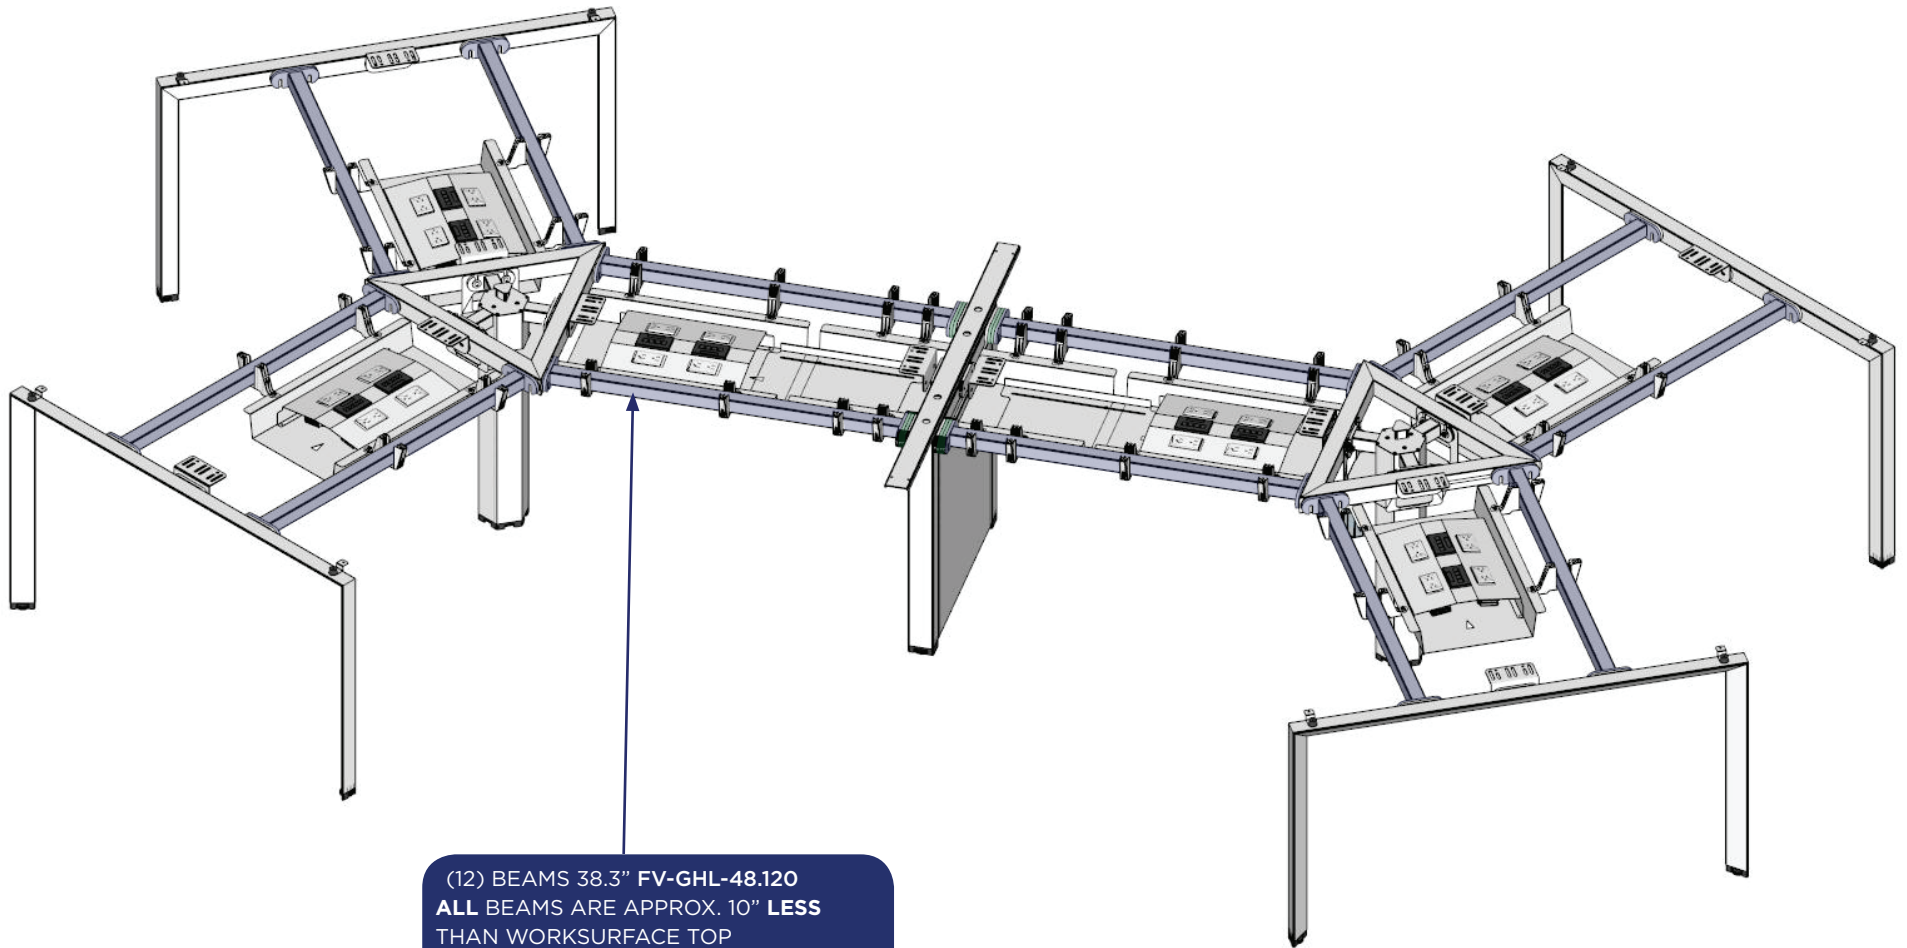


 (12) BEAMS 38.3" FV-GHL-48.120
**ALL BEAMS ARE APPROX. 10" LESS
THAN WORKSURFACE TOP**

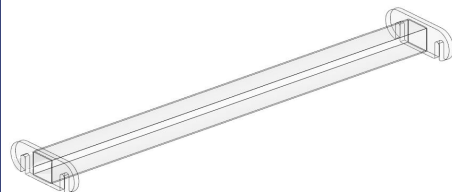


Start/End Element 48" shown as example

 Stretchers Overview

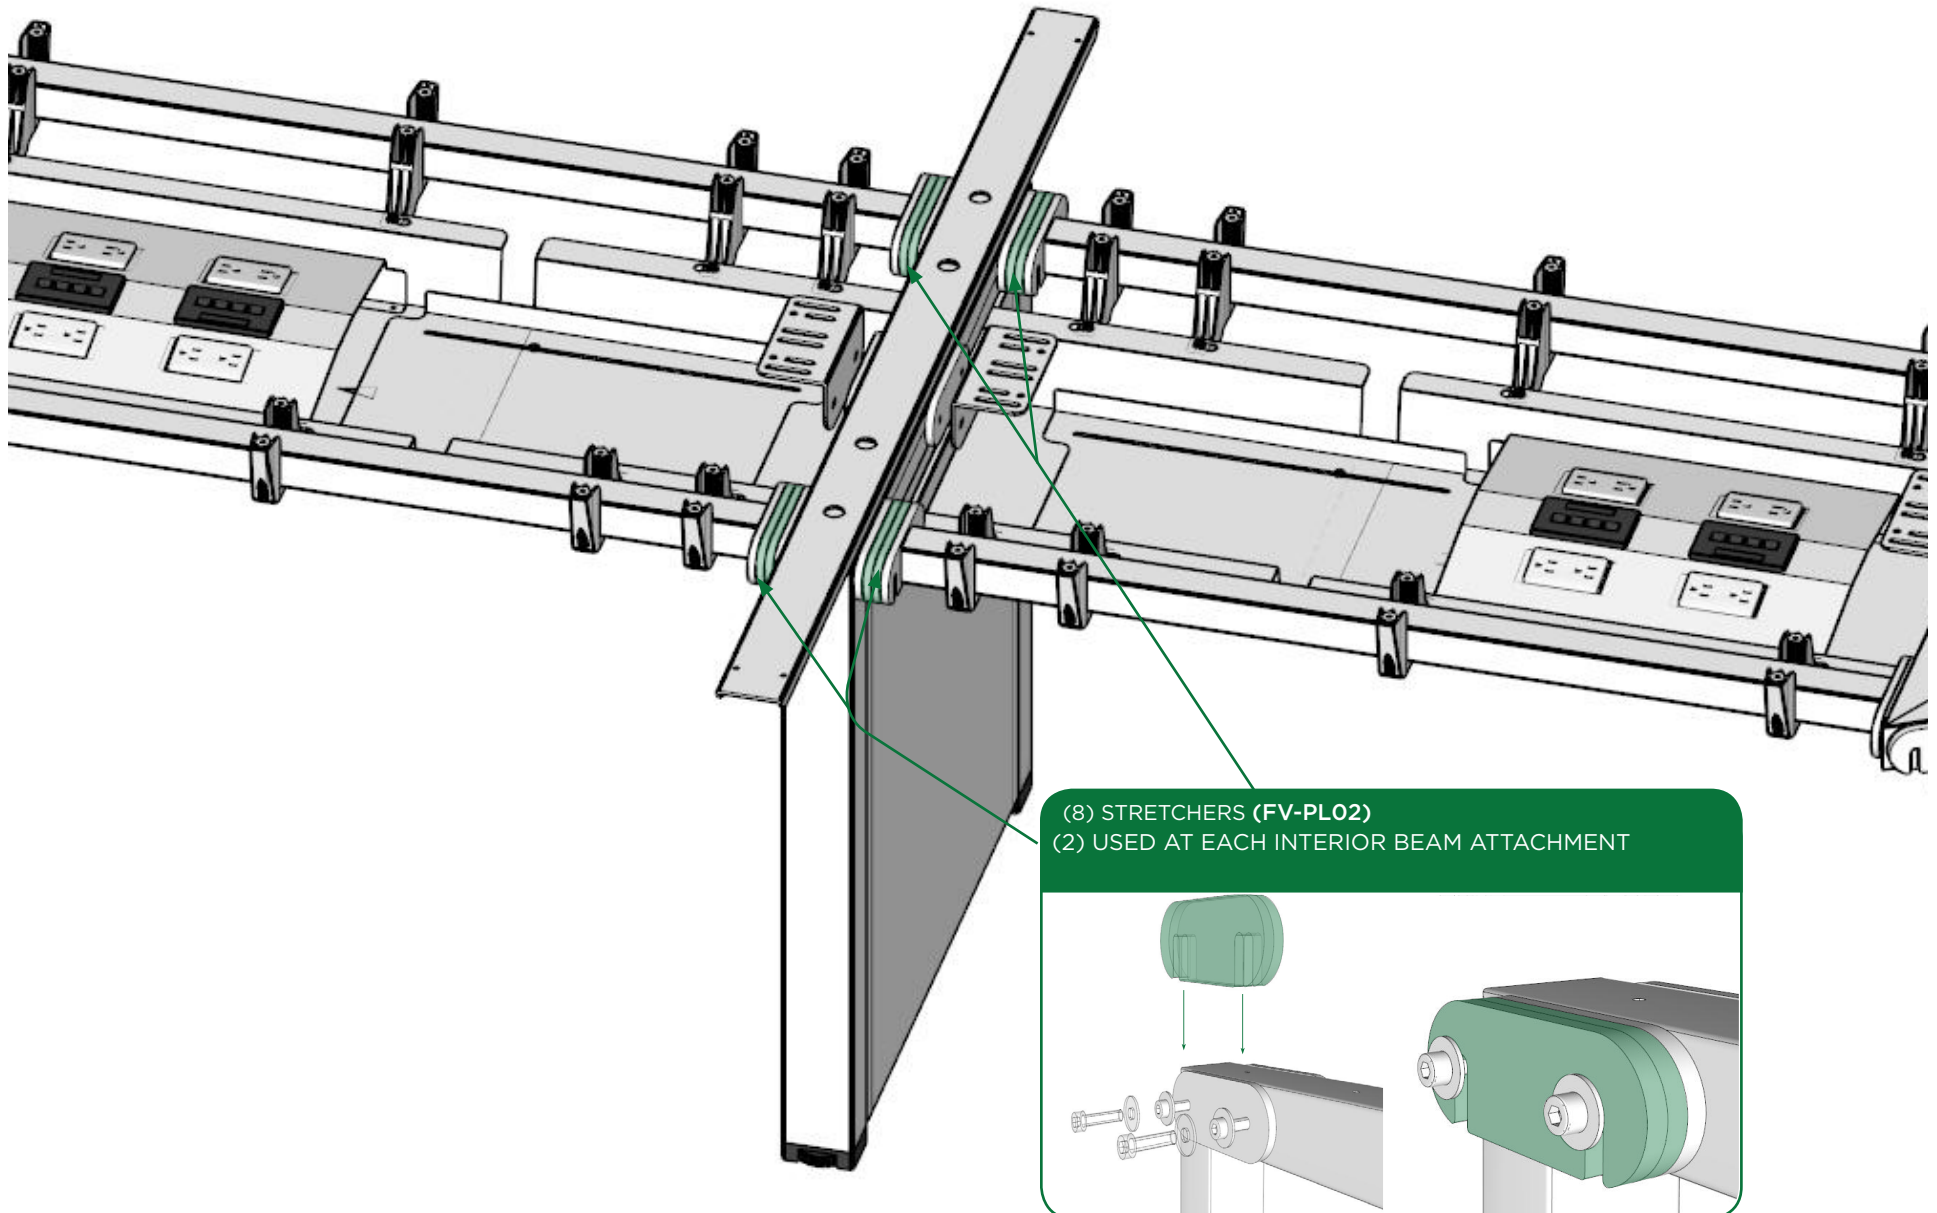


Start/End Element 48" shown as example

 Troughs Overview

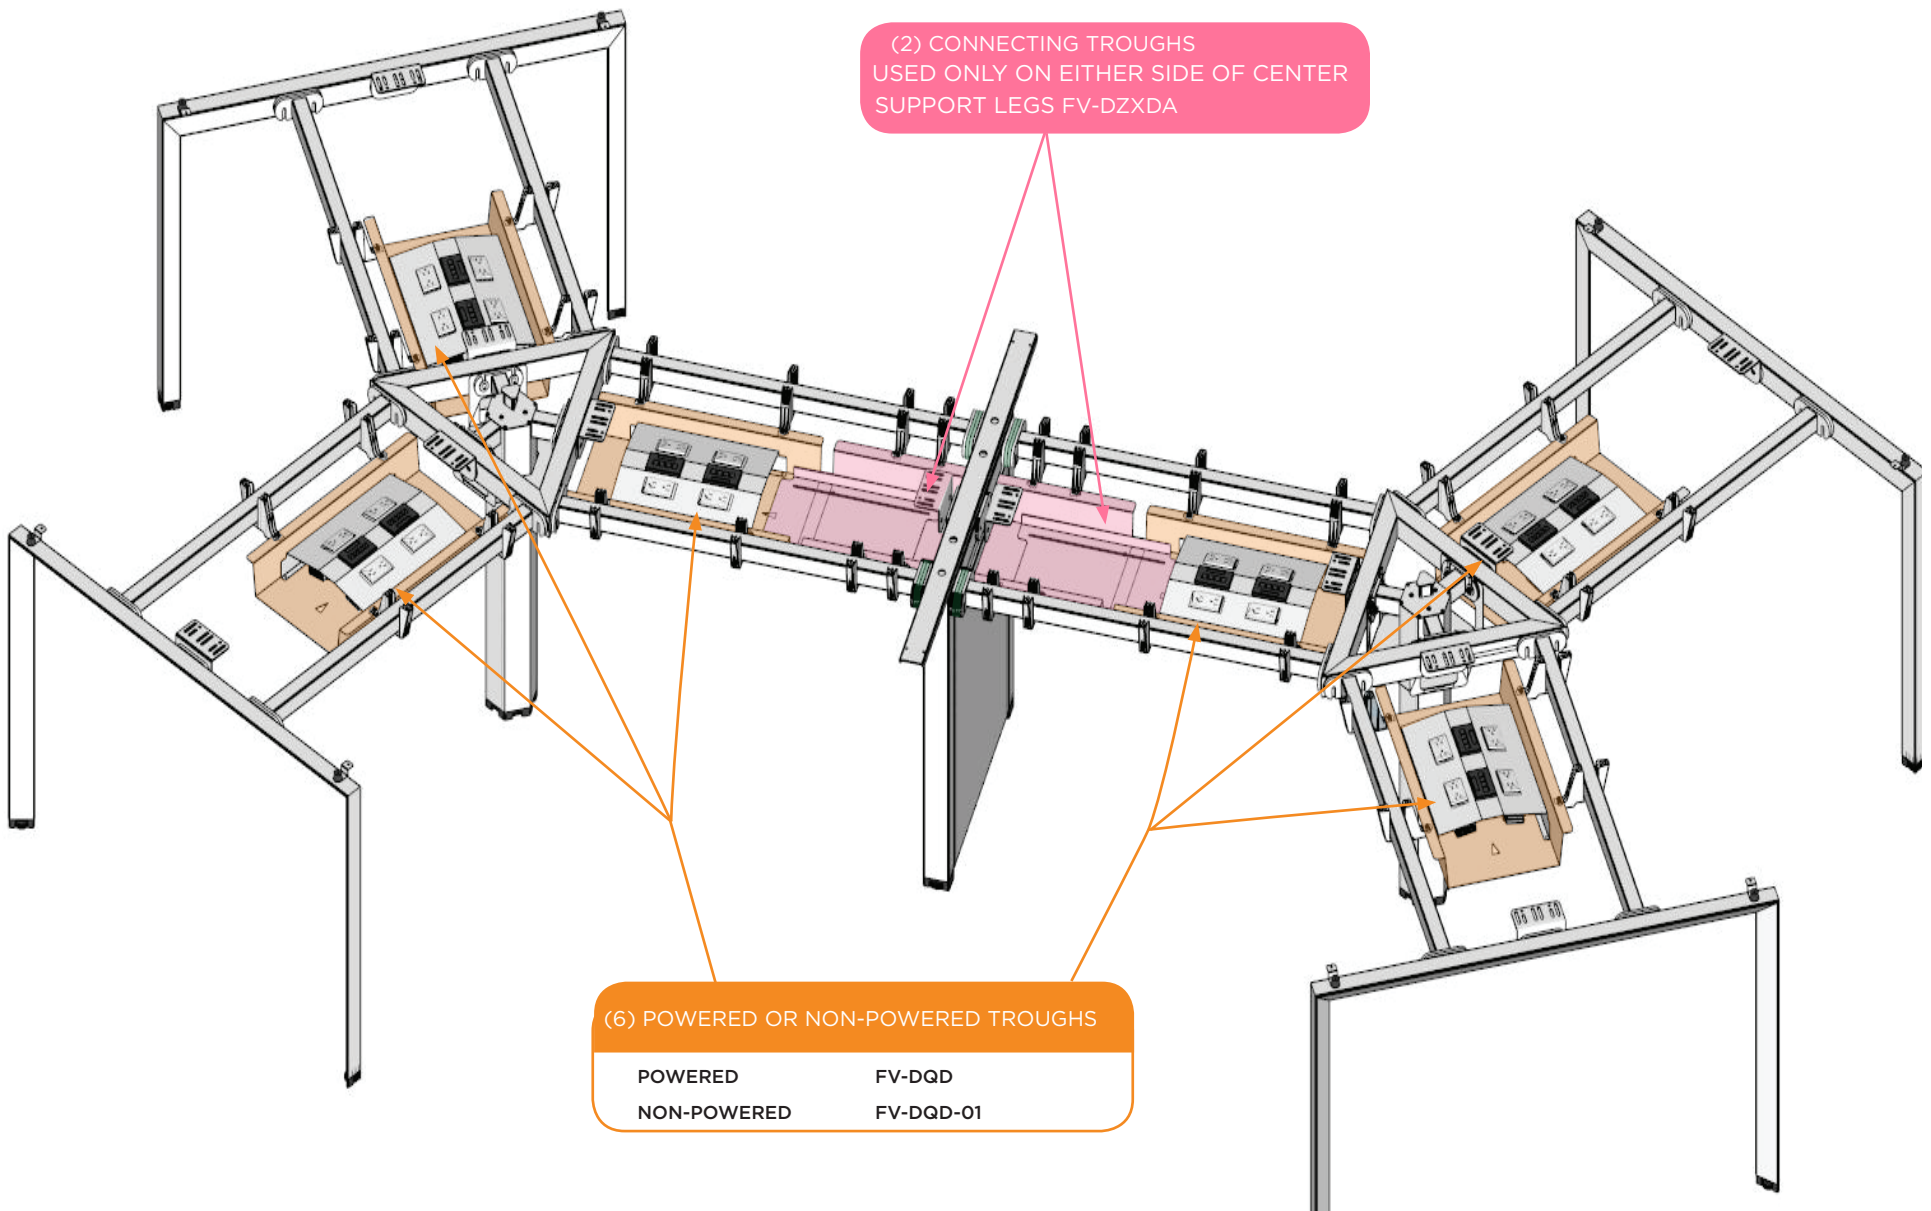

Start/End Element 48" shown as example

 Power Overview

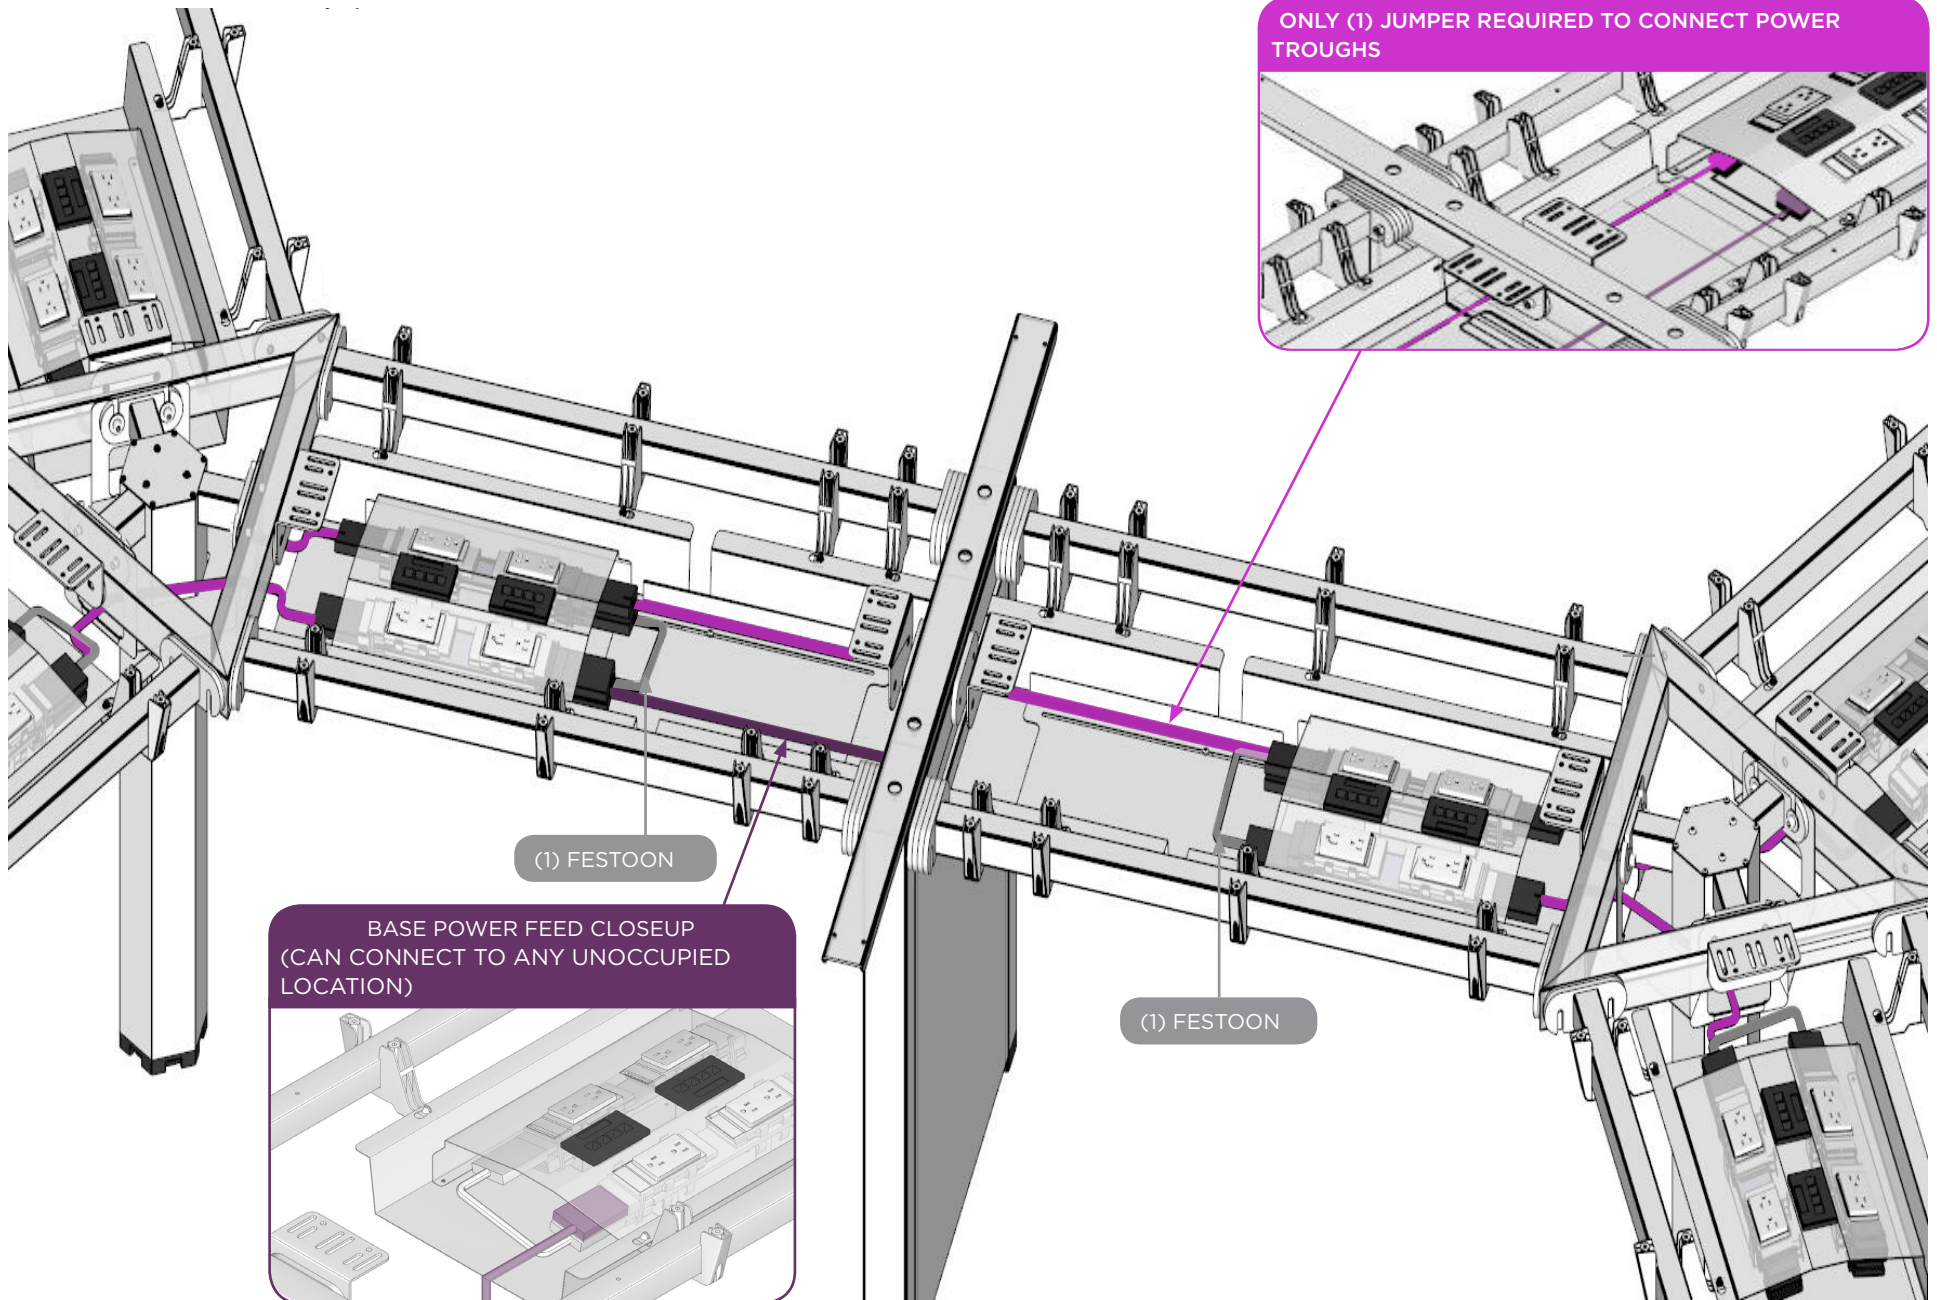


Start/End Element


Electrical Distribution

Power Overview

 TOP VIEW

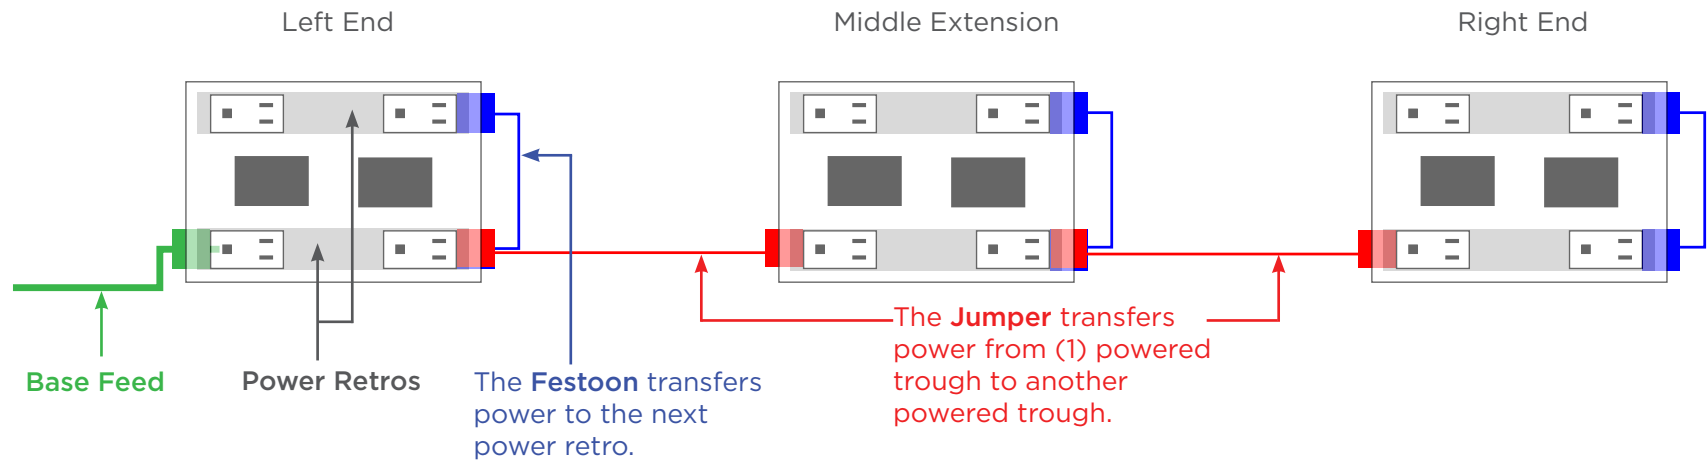


SIDE VIEW

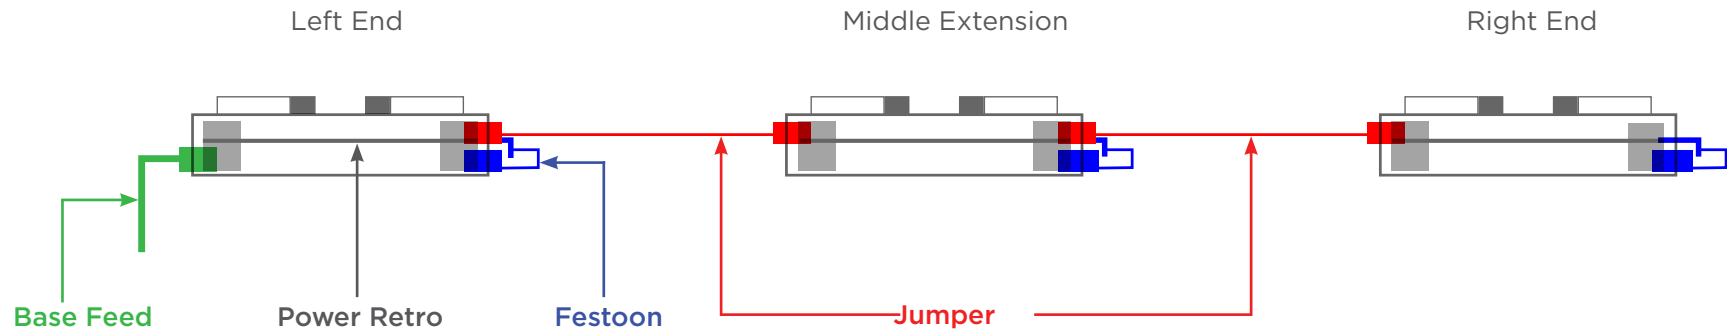 

Electrical Distribution

4 Circuit Power Entry

 System is rated for connection to a 3 phase system.
Rating 120/208V, 3-PH WYE, 60-hz, 20 amp (CSA 15 amp)
multi-wire branch circuit

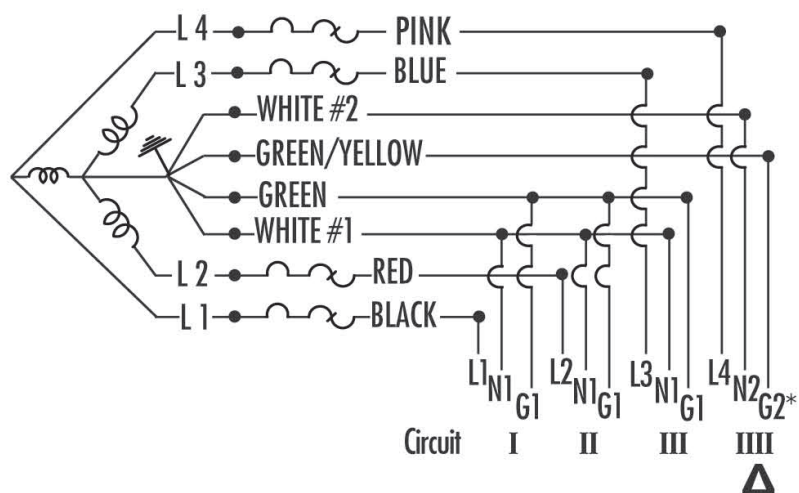


*Separate isolated ground

WARNING:

Risk of fire or electric shock. This office furnishings system may be connected to more than one source of supply.
All sources must be disconnected prior to any servicing. No single circuit may be powered by more than one source.

 
System is rated for connection to a ground 120/240V,
1-PH 60-hz, 20 amp multi-wire branch circuit

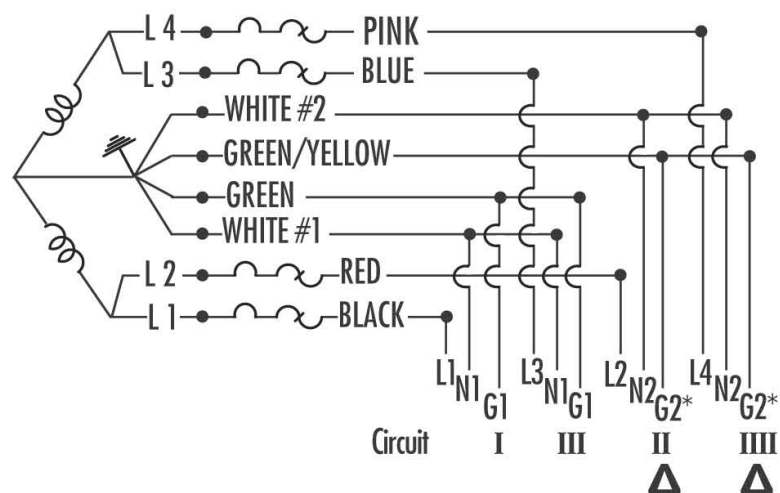

*Separate isolated ground


Start/End Element 48" shown as example

 Track Overview

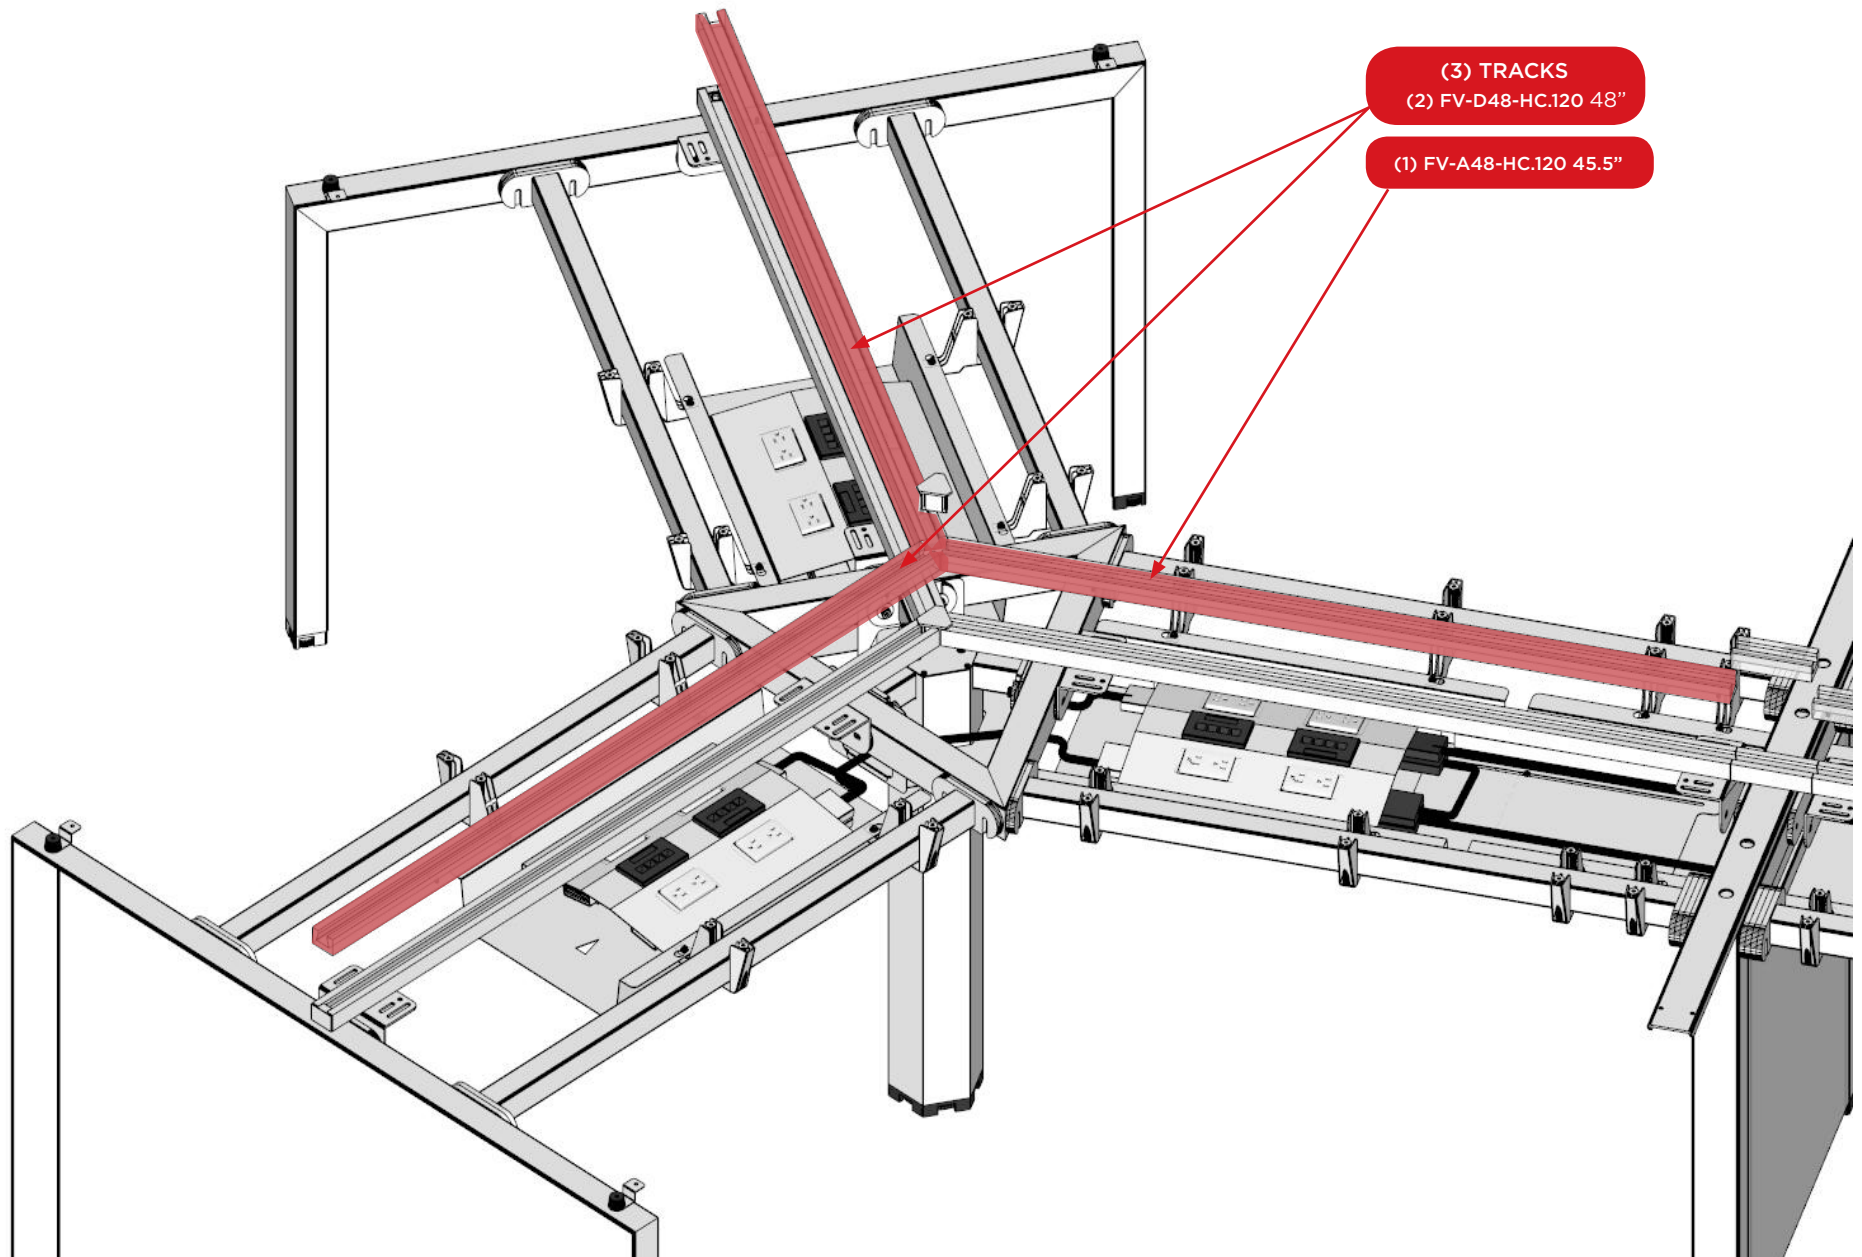

Extension Element 48" shown as example

 Structural Overview

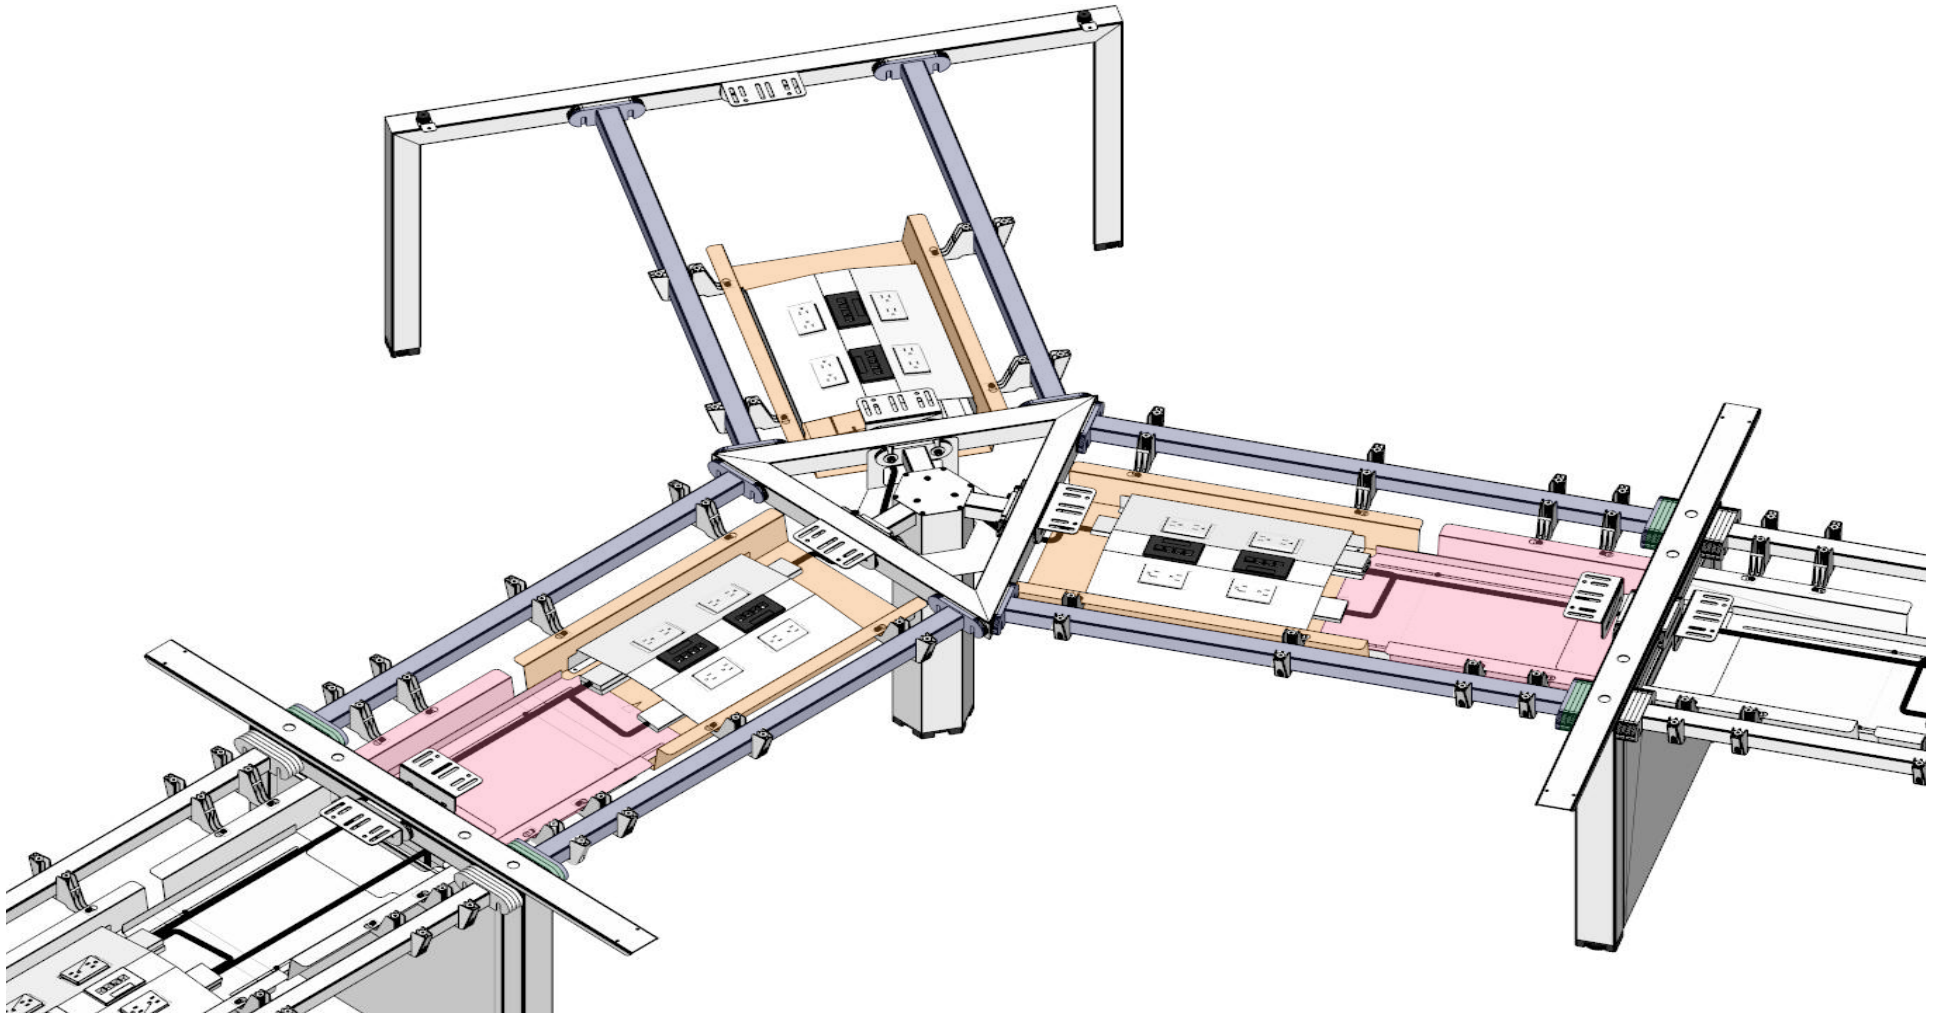

(2) CONNECTING TROUGHS
(TELESCOPING) pg 15

(6) BEAMS 38.3"
pg 13

(3) POWERED OR NON-
POWERED TROUGHS
pg 15

(8) STRETCHERS
pg 14

EXTENSION TRACKS
pg 19

ELECTRICAL: pg 16

 
JUMPER
CONNECTION

BASE POWER FEED

FESTOON


Extension Element 48" shown as example

Beams Overview

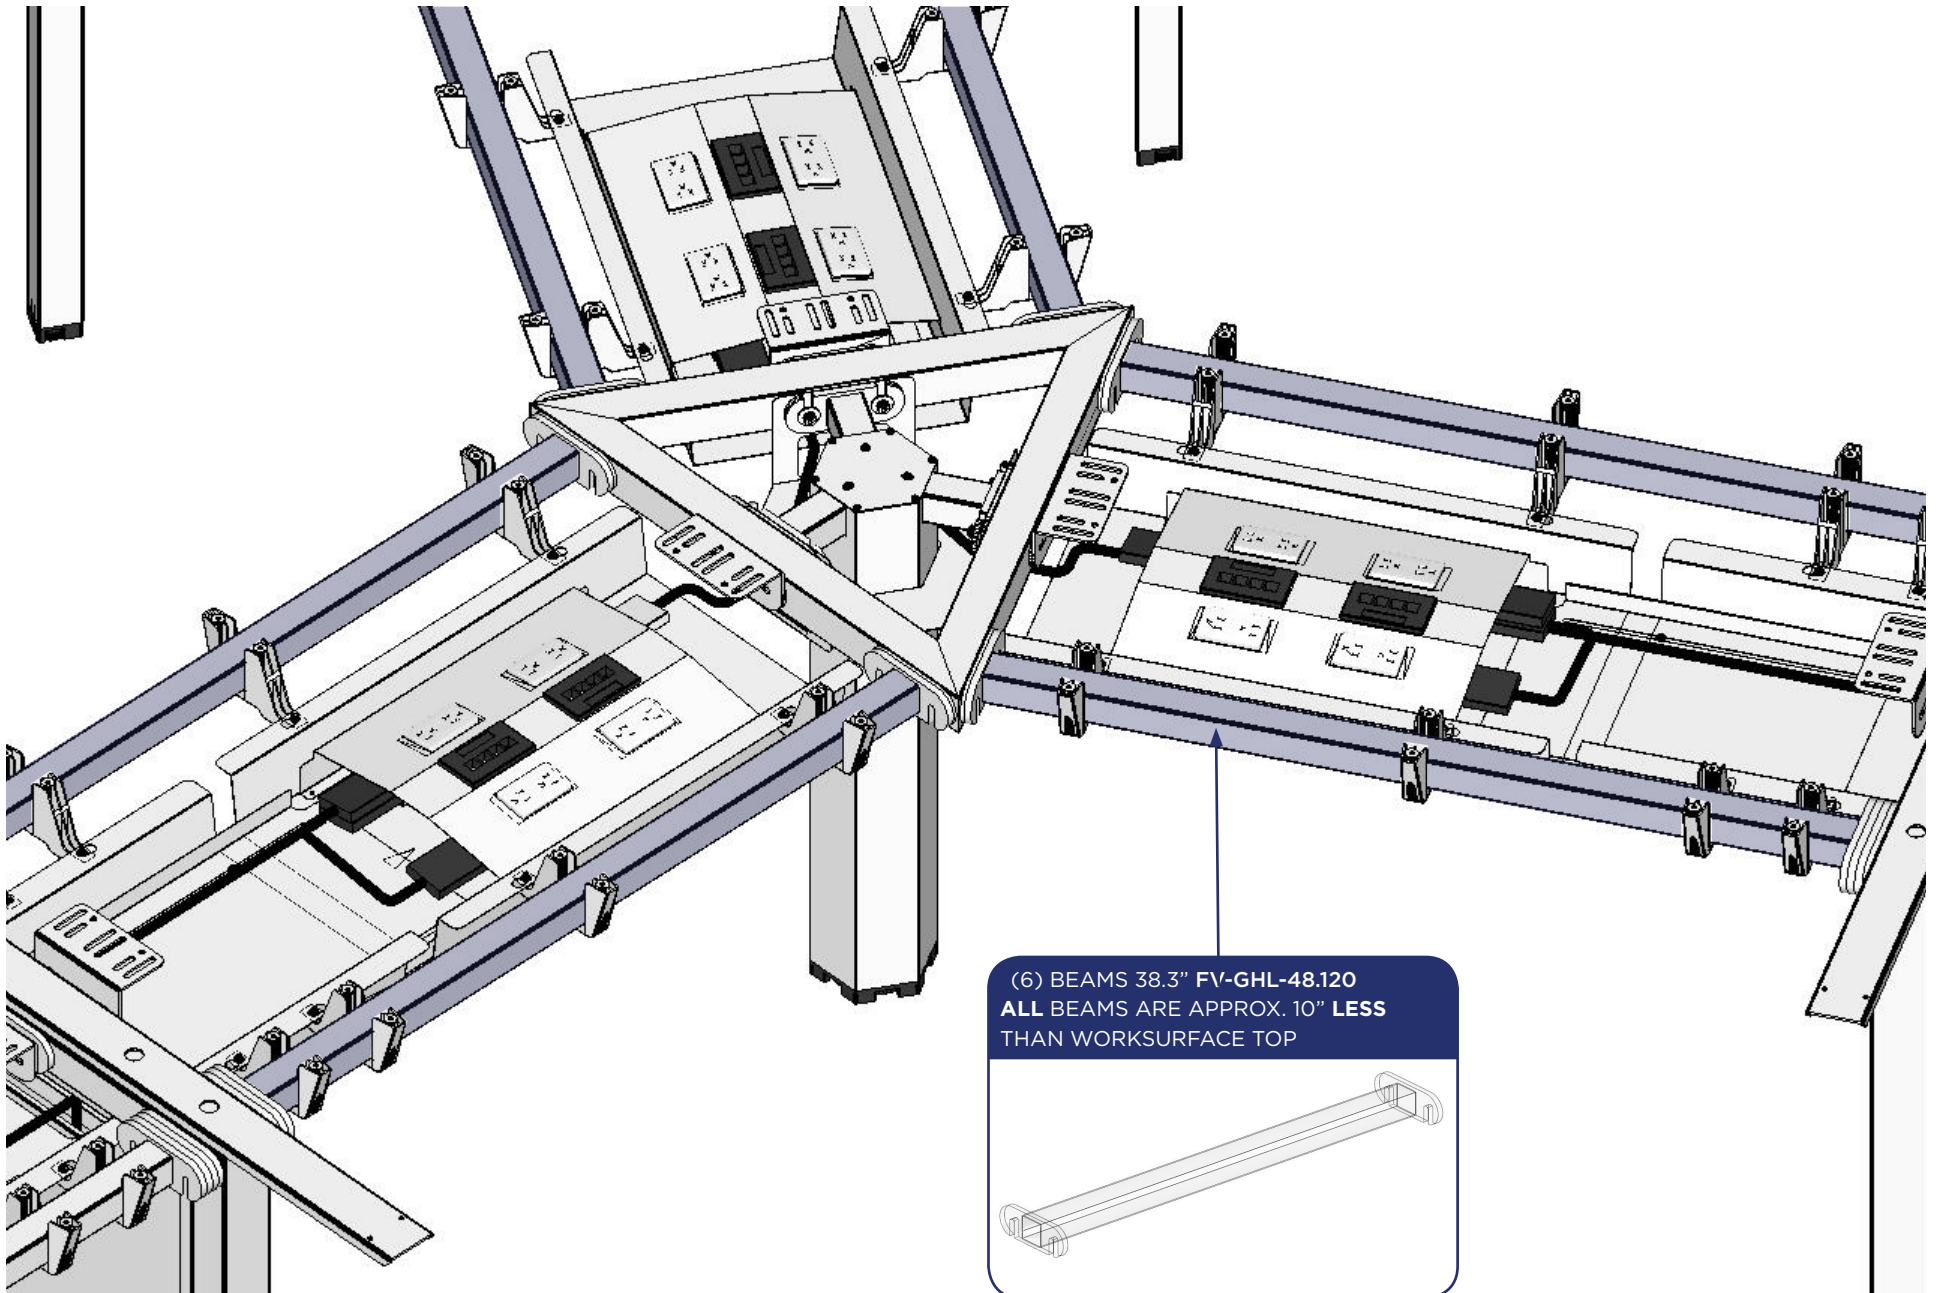


Extension Element 48" shown as example

 Stretchers Overview

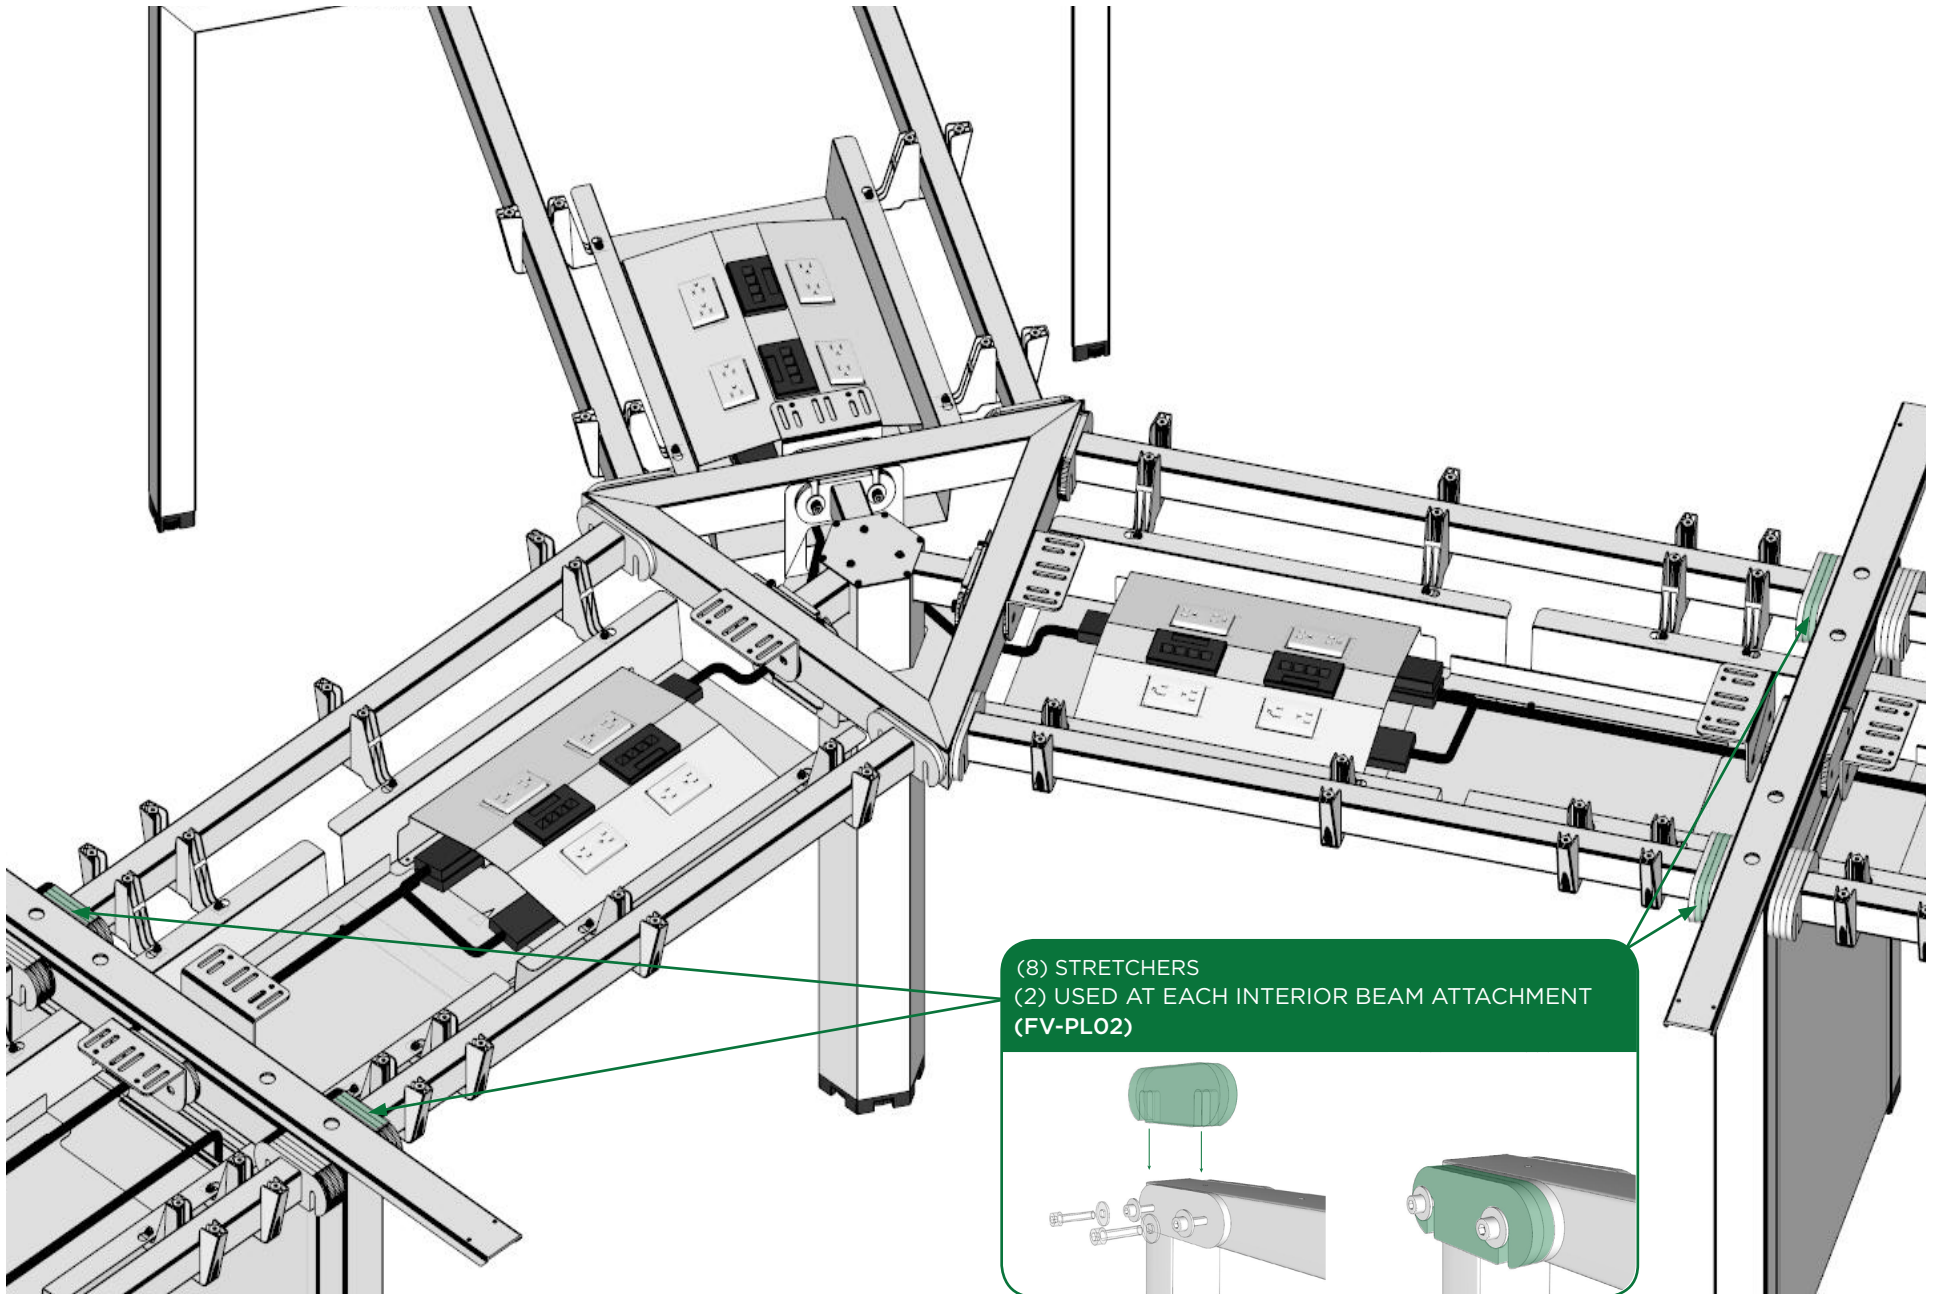


Extension Element 48" shown as example

 Troughs Overview

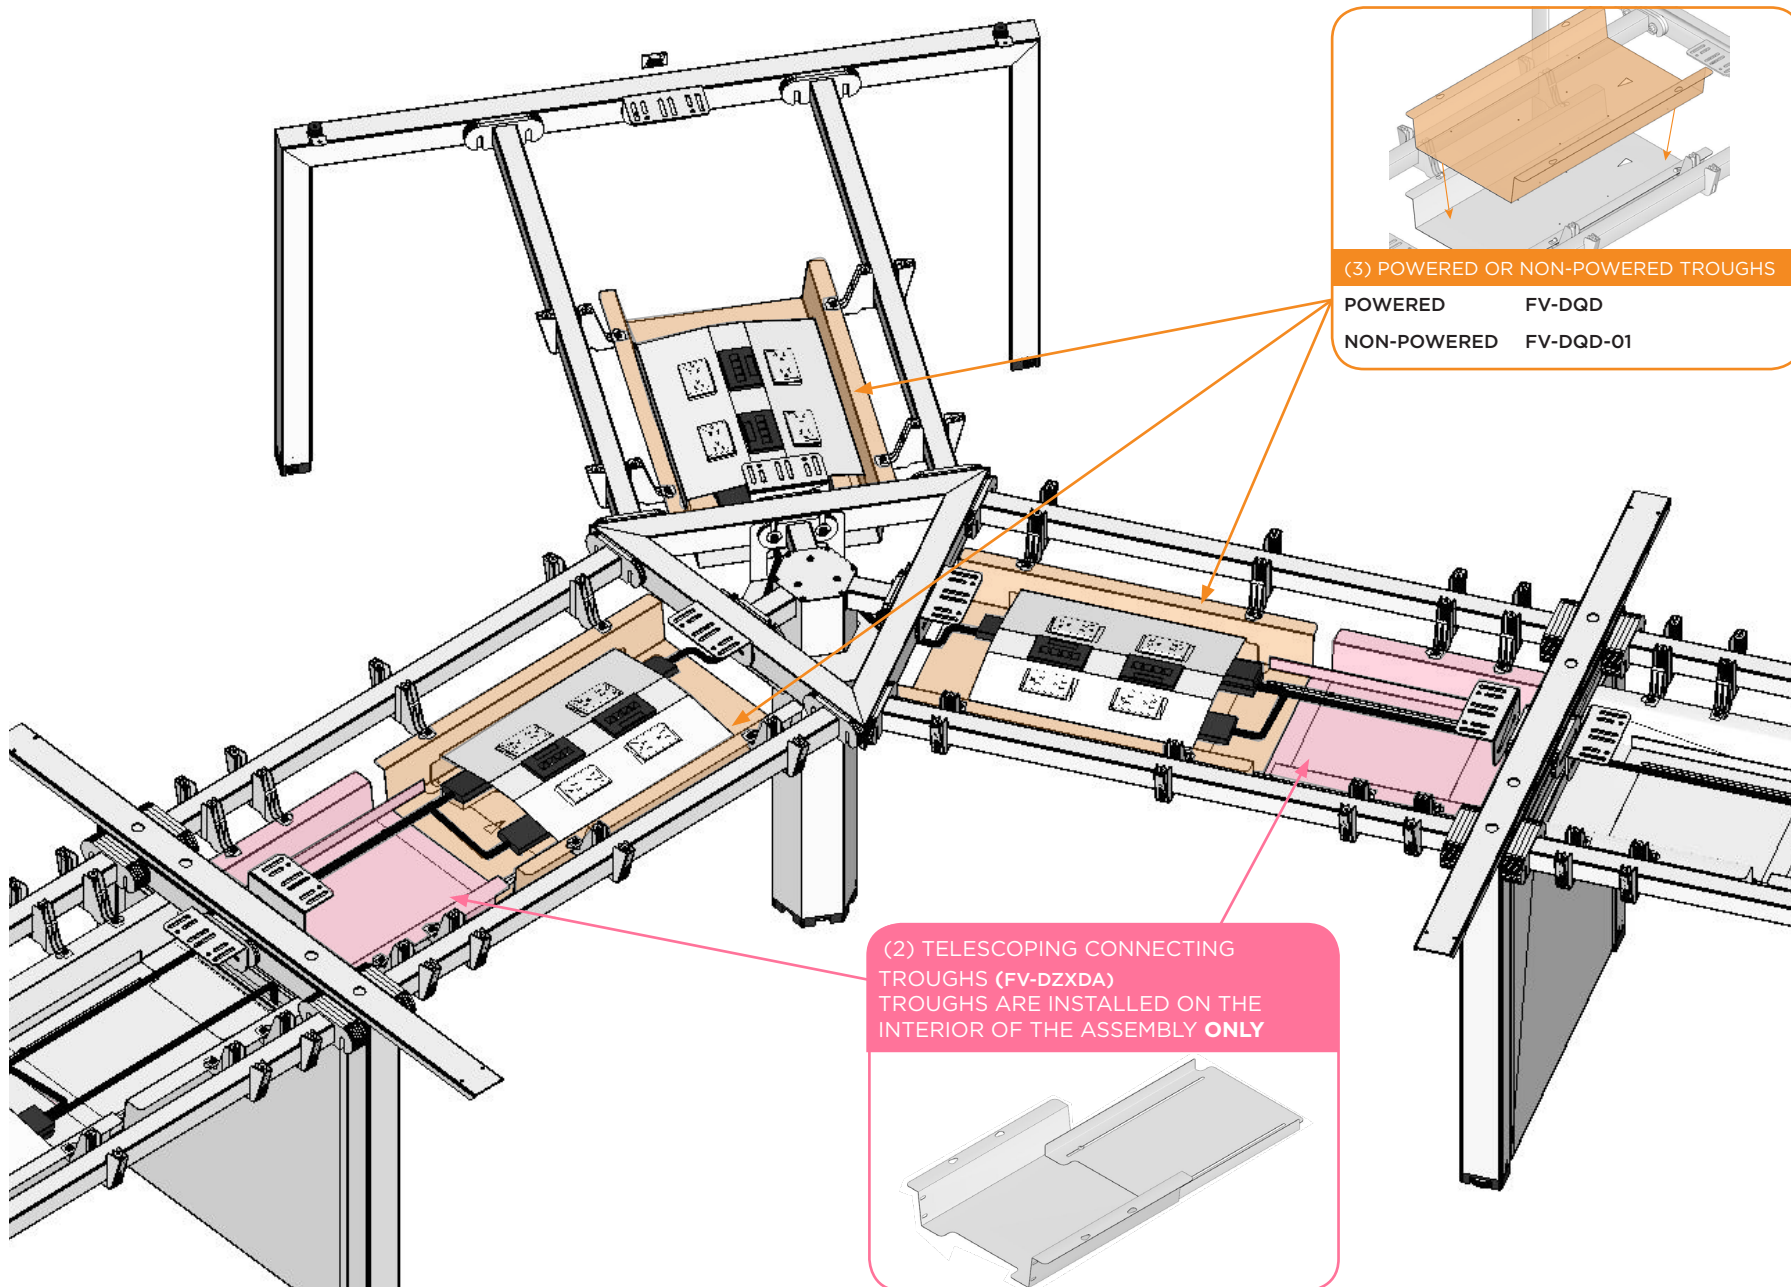

Extension Element 48" shown as example

 Power Overview

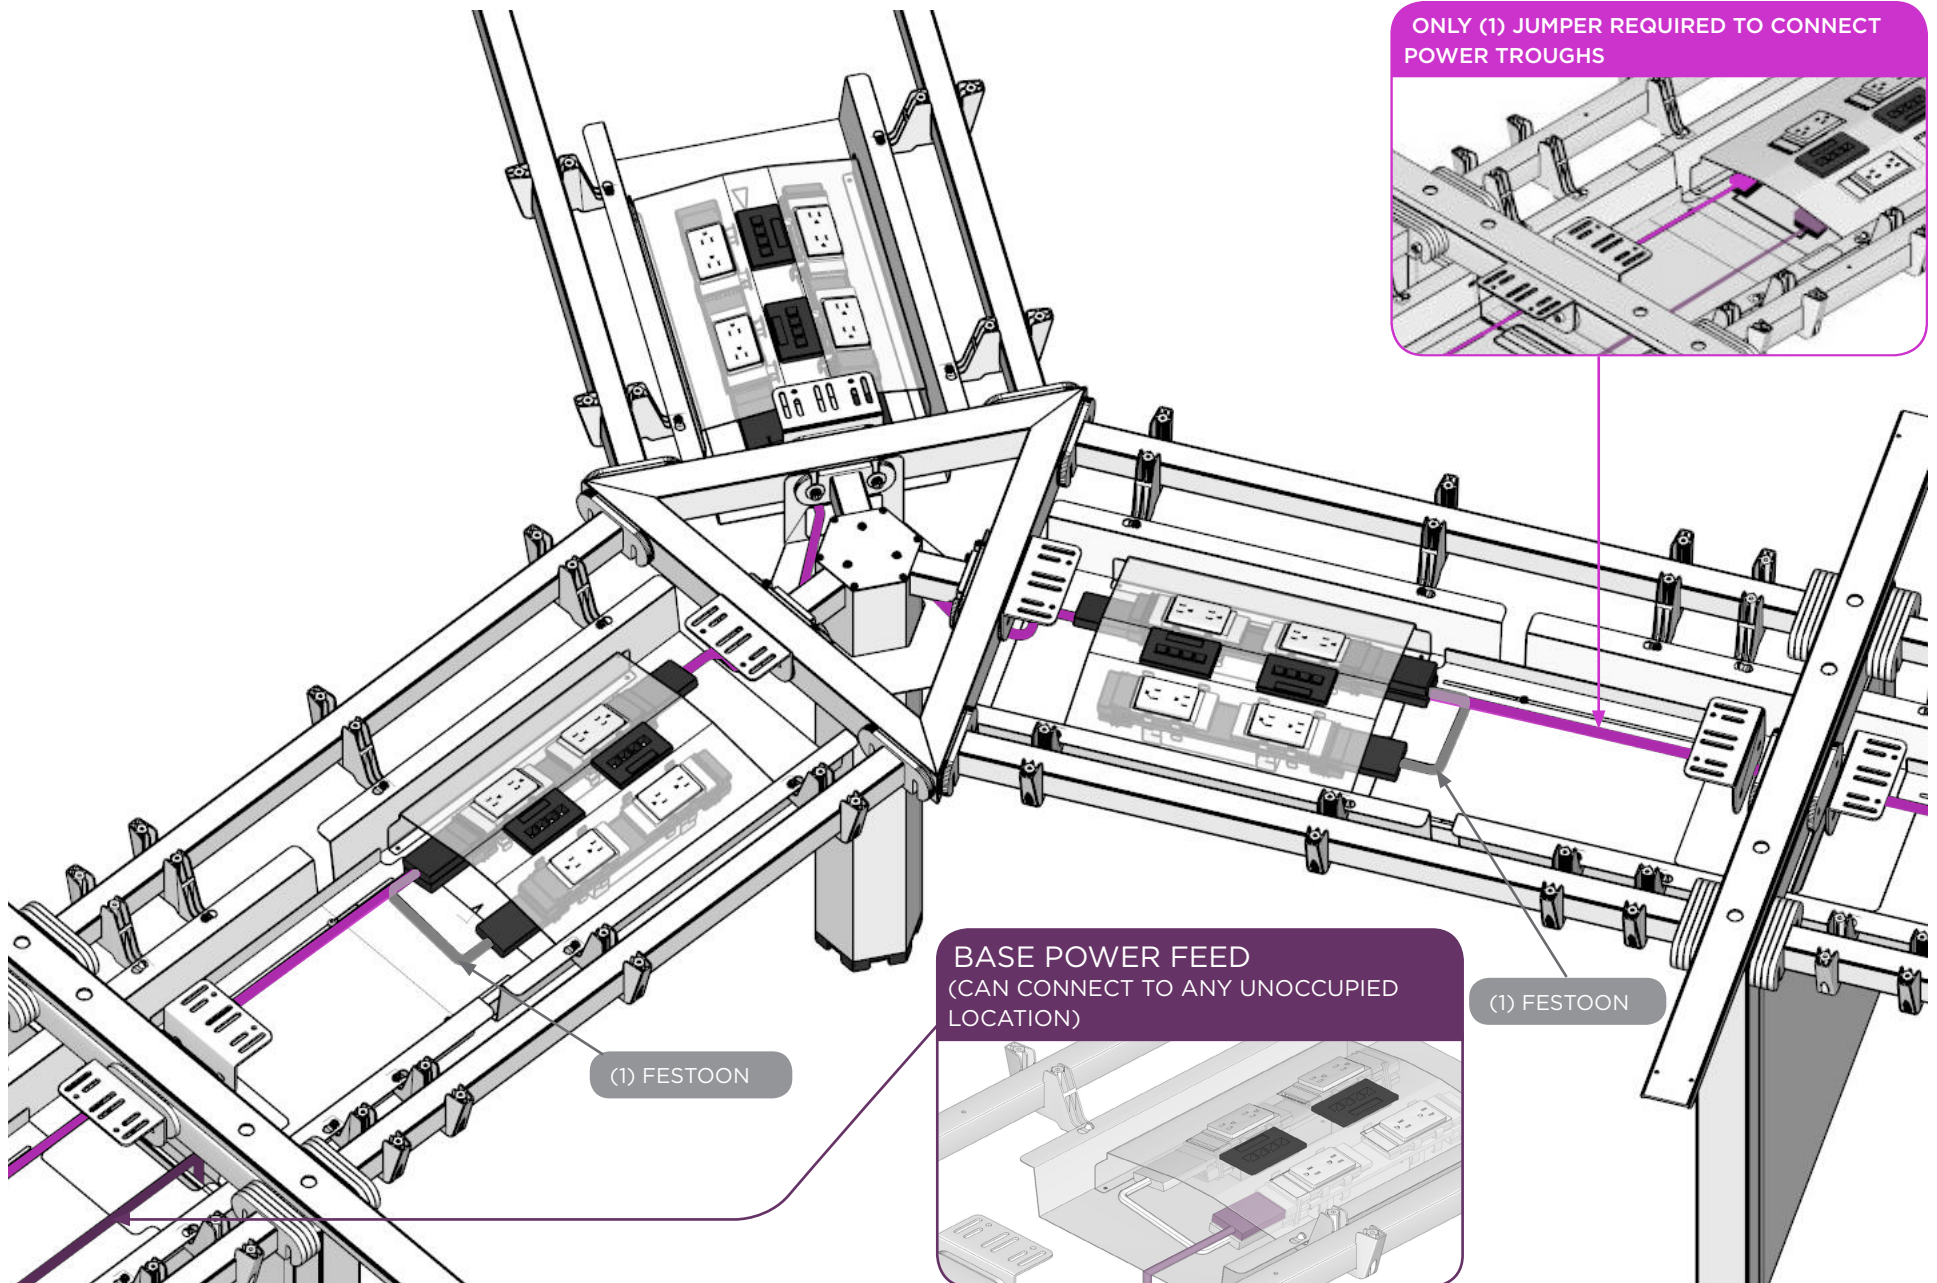


Start/End Element


Electrical Distribution

Power Overview

 TOP VIEW

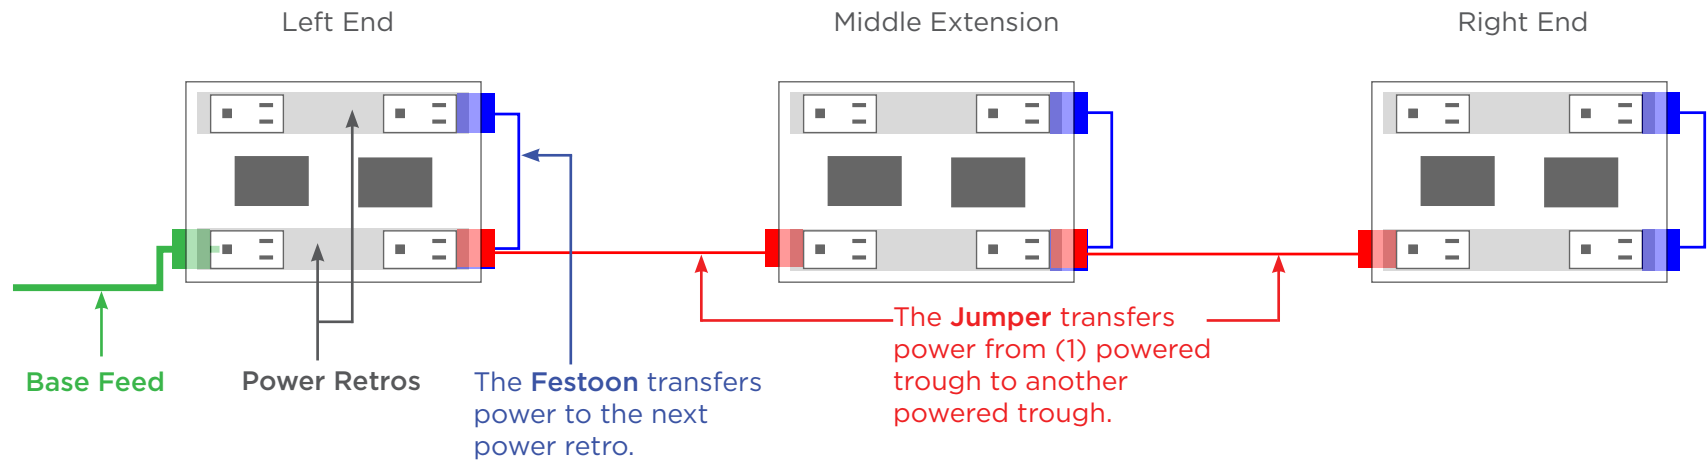


SIDE VIEW

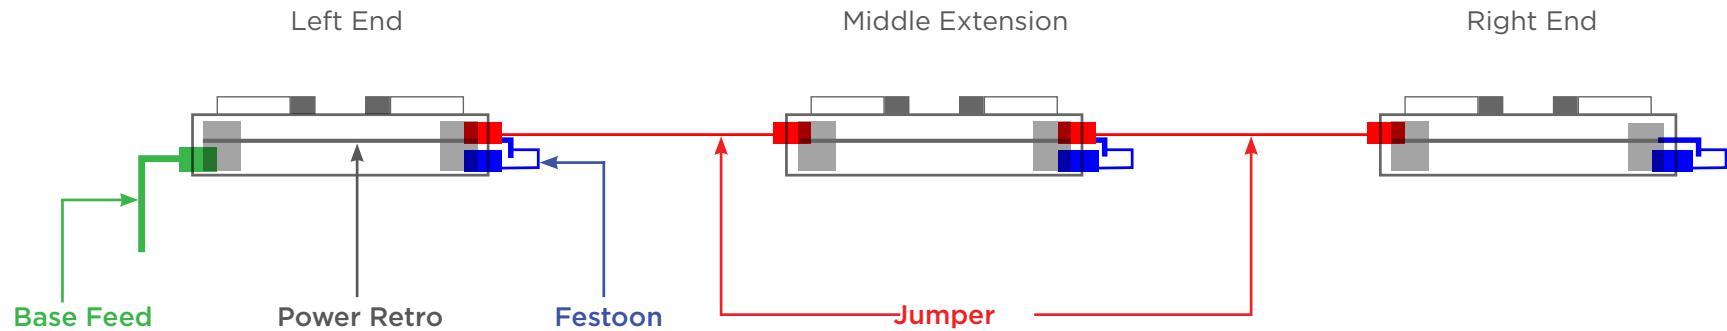 

Electrical Distribution


4 Circuit Power Entry

 System is rated for connection to a 3 phase system.
Rating 120/208V, 3-PH WYE, 60-hz, 20 amp (CSA 15 amp)
multi-wire branch circuit

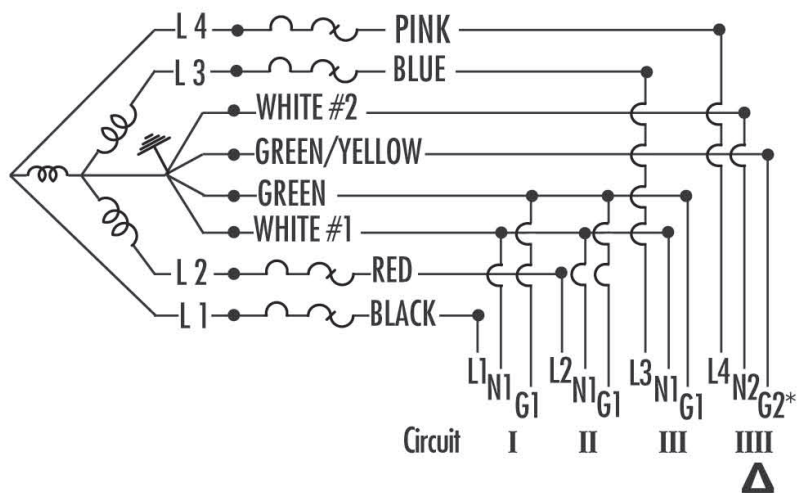

*Separate isolated ground

 System is rated for connection to a ground 120/240V,
1-PH 60-hz, 20 amp multi-wire branch circuit

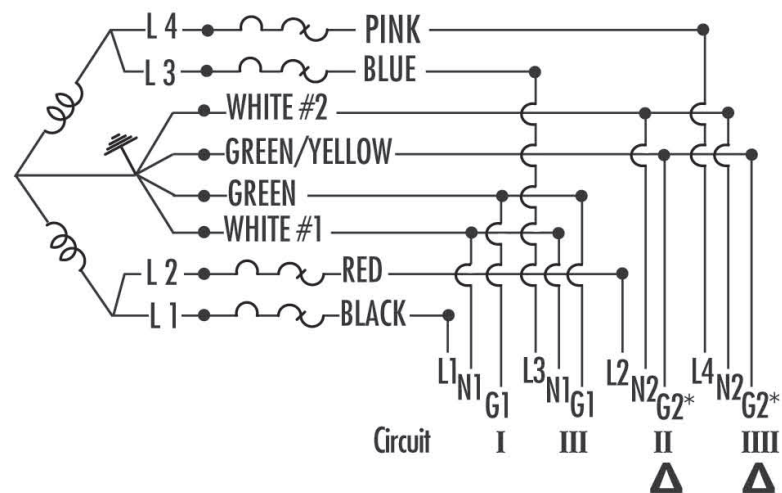


*Separate isolated ground

WARNING:

Risk of fire or electric shock. This office furnishings system may be connected to more than one source of supply.
All sources must be disconnected prior to any servicing. No single circuit may be powered by more than one source.


Extension Element 48" shown as example

 Track Overview

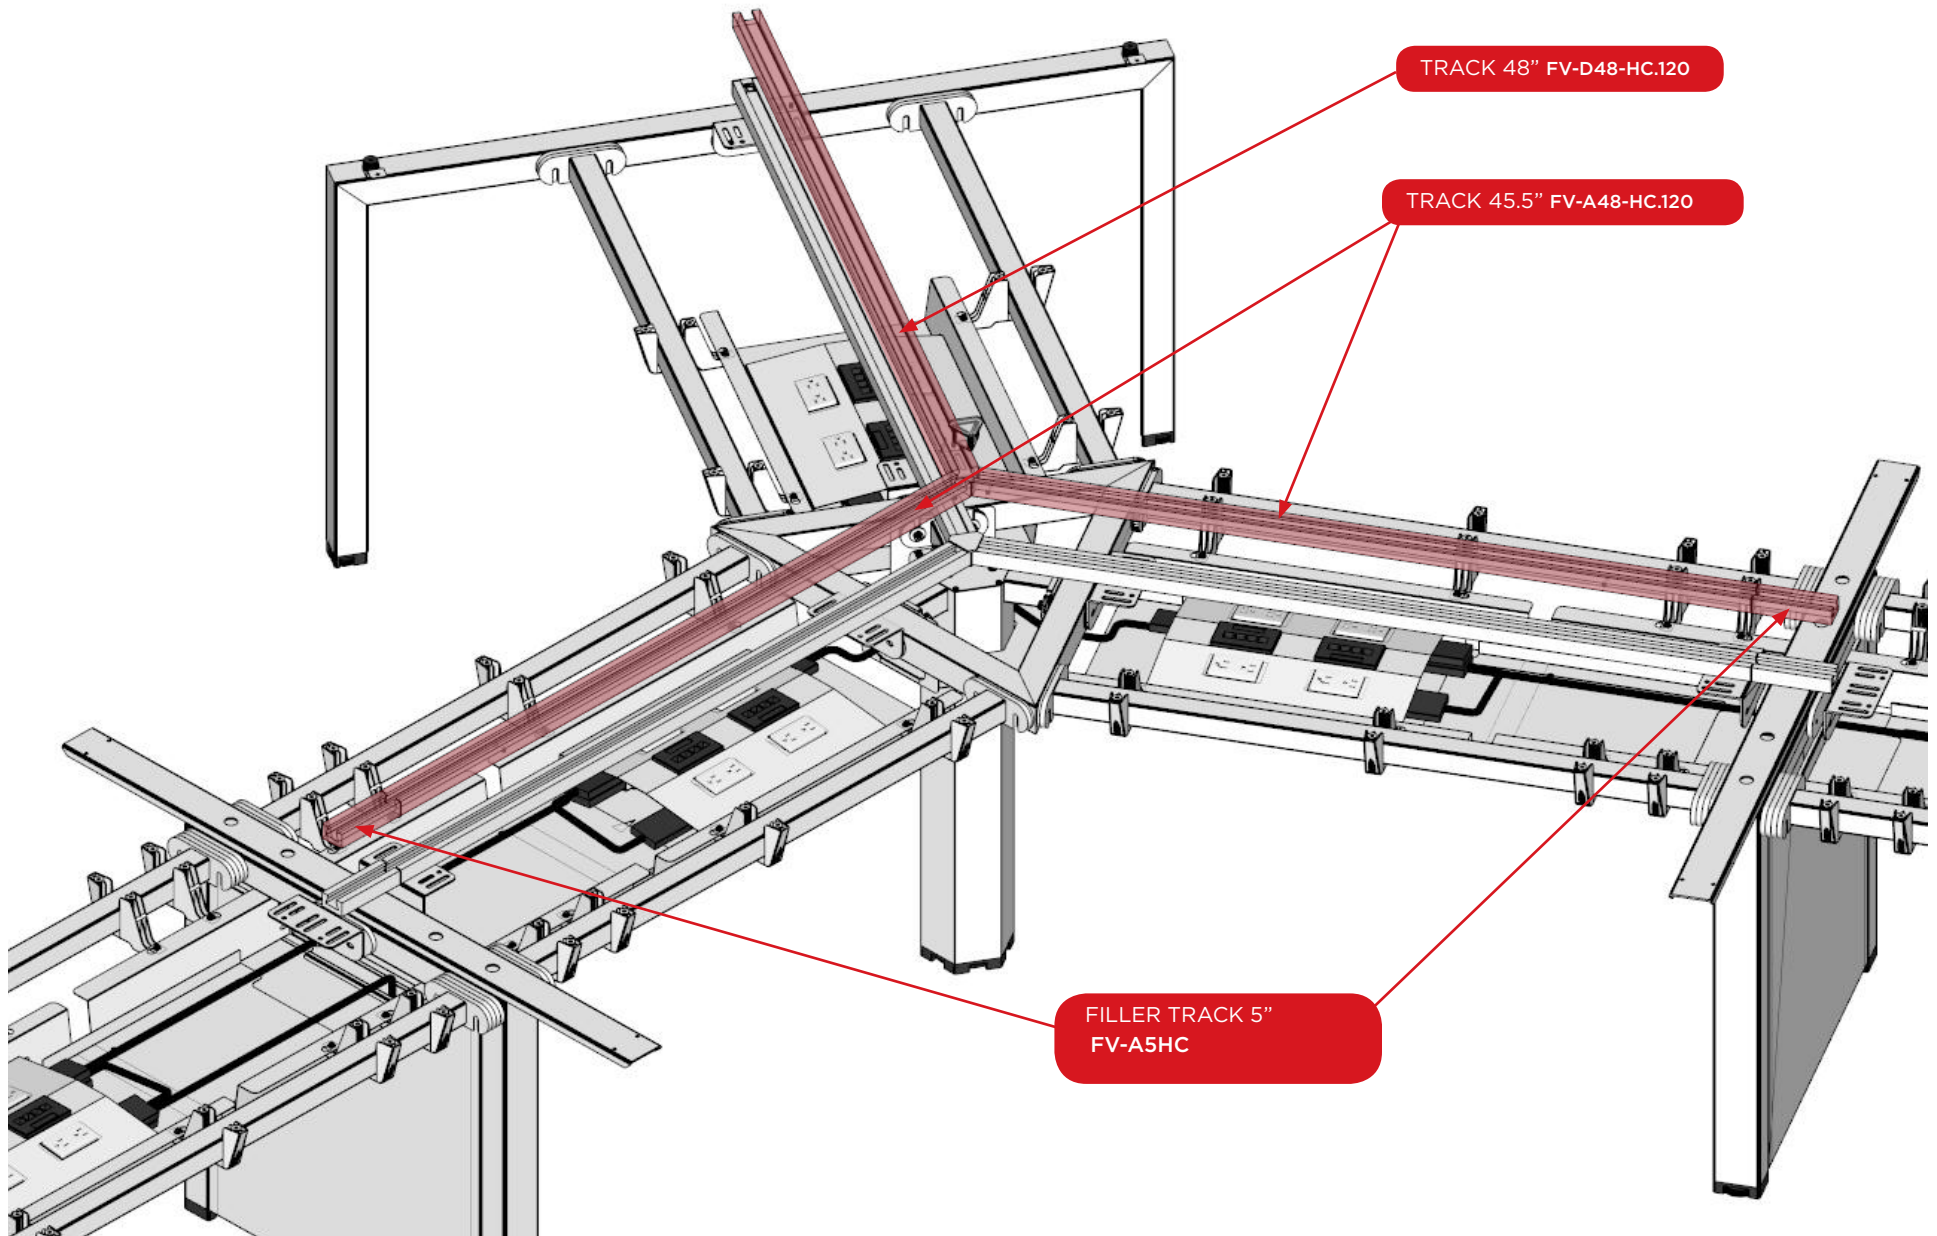


Modesty Panel Installation

 
How to Install Brackets for Modesty Panel

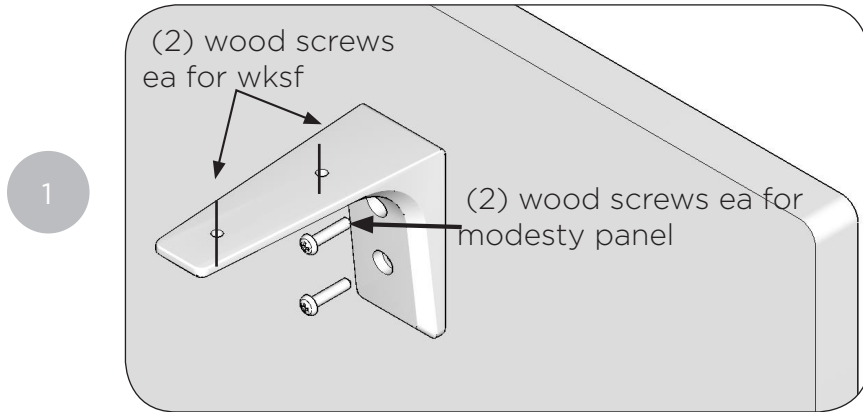

 
Install brackets (FMOD.BRKT) to Modesty Panel at the pre-drilled holes with the screws provided. The screws go through the bracket into the modesty.

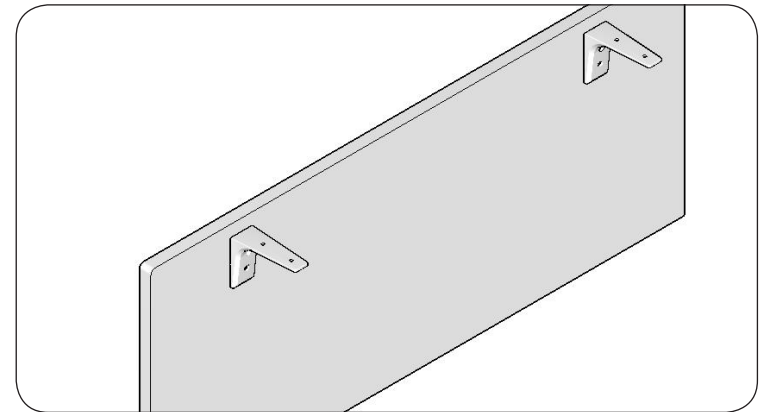

  Brackets should be just 1" from the top of the modesty

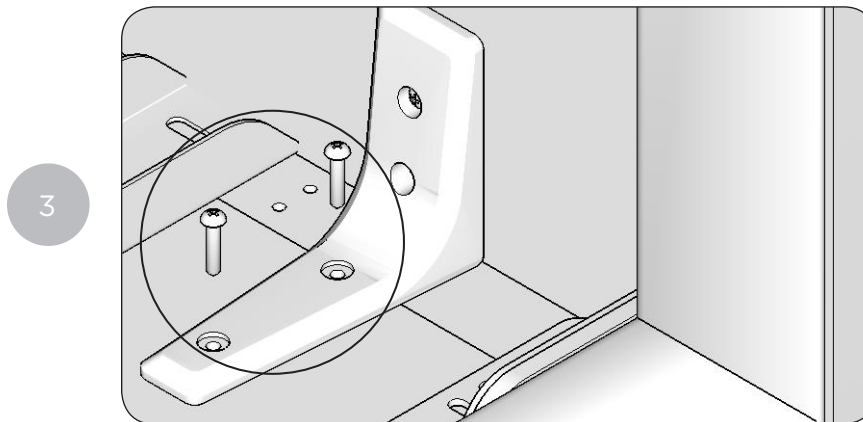
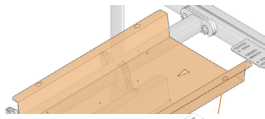
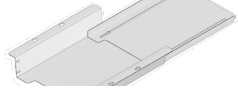



Install Modesty Panel on the bottom of the worksurface

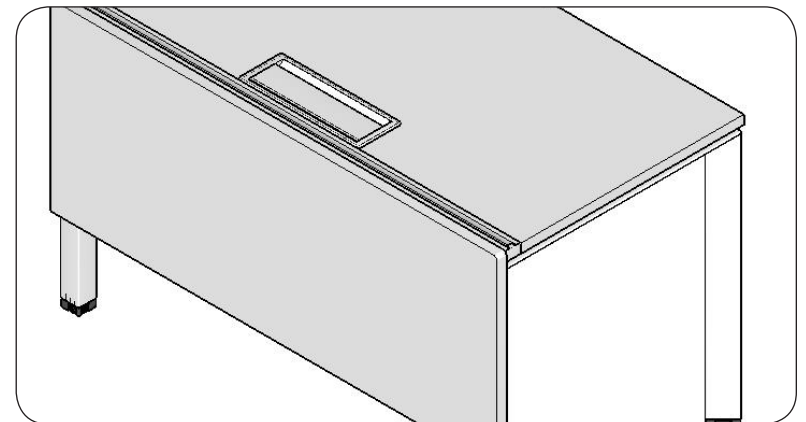

The Modesty Panel matches the width of the table and the top of the Modesty is aligned with the top of the track.

IMAGE KEY

PART #	DESCRIPTION	IMAGE
FV-D48-HC.120	Start/End Track	
FV-A48-HC.120	Extension track	
FV-A5HC	Filler Track	
FUCLD-120	Center Leg	
FVWM-120	Wire Manager	
FV-DQD-01	Non-Powered trough	
FV-DQD	Powered Trough	
FV-DZXDA	Connecting Trough	
FV-GHL-48	Beam	
FV-GZCB01A	Worksurface Support Overpanel Leg	
FV-PL02	Stretchers	
FMOD.BRKT	Modesty Panel Bracket	