



Installation / Drawer Rails

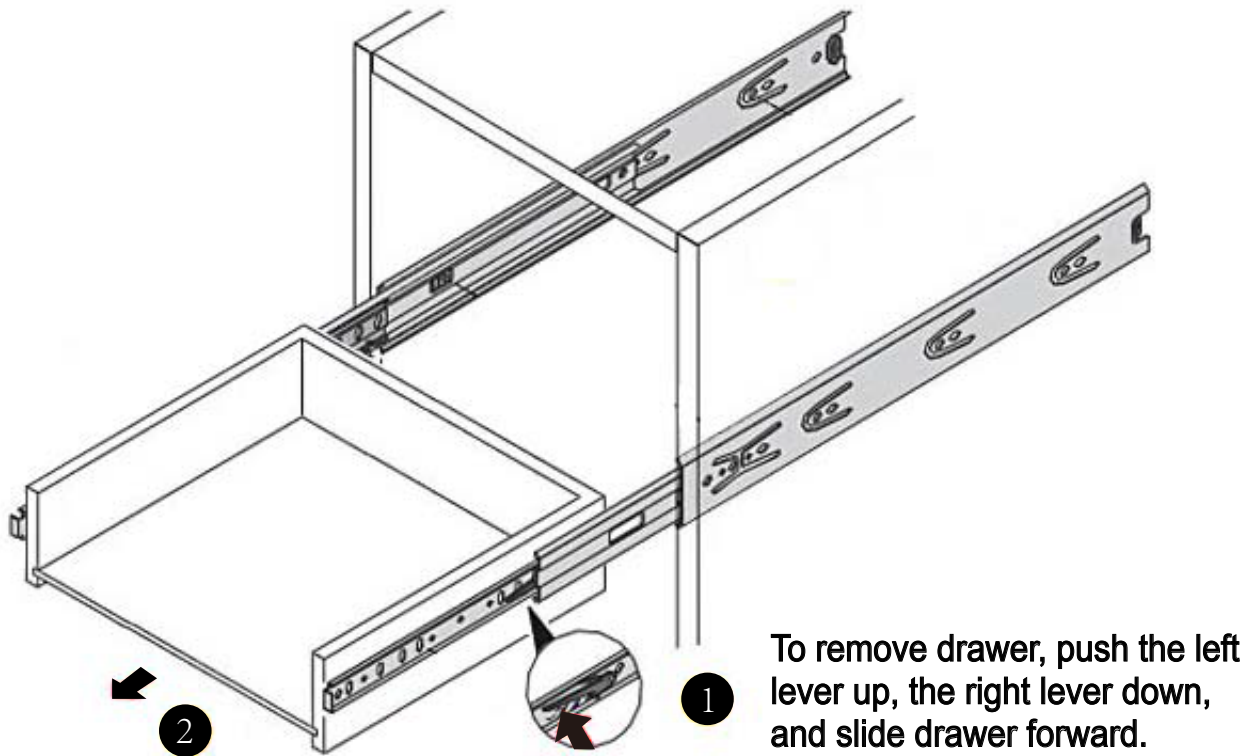



To install drawer, make sure to pull the middle rail forward, as shown in close up.

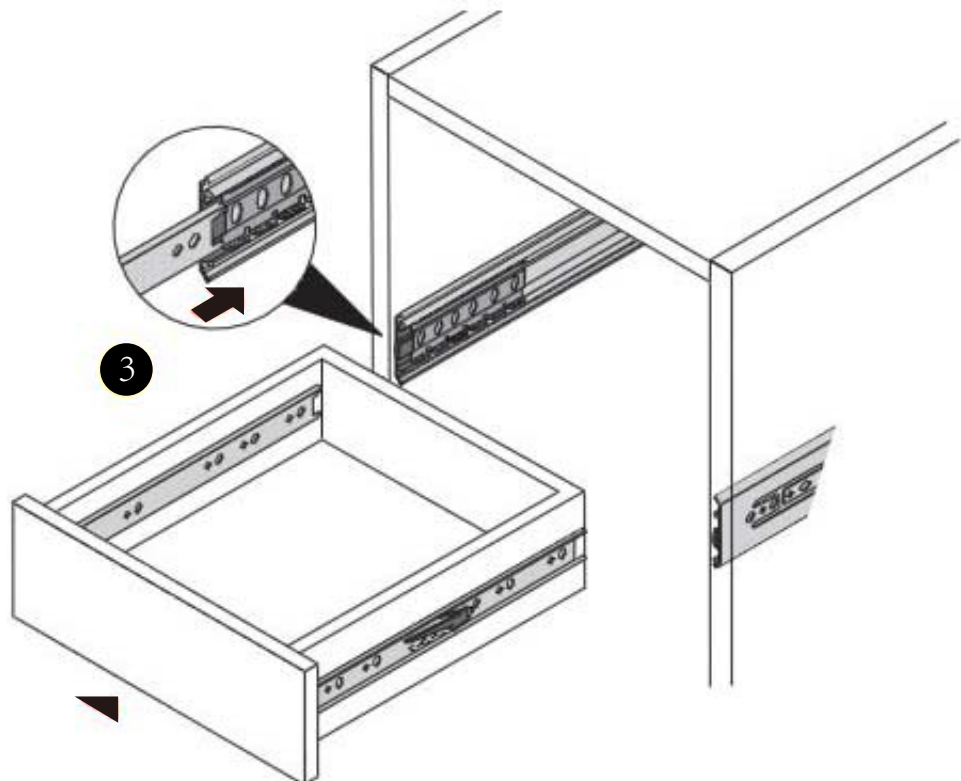

Suspended pedestal.1b1f

Before installing the pedestal, remove the drawers according to « Instruction / Drawer Rails » .

If the underside of the worksurface panel has **NO HOLES(?)** as shown in figure A, Please use the 6 provided **WOOD SCREWS** to attach the pedestal. Secure the Pedestal by the 6 smaller **Screw** holes in the Pedestal.

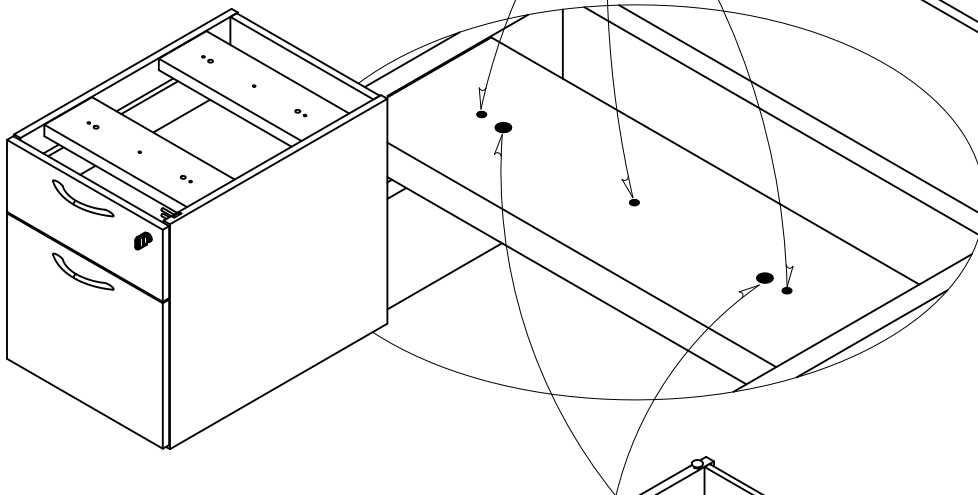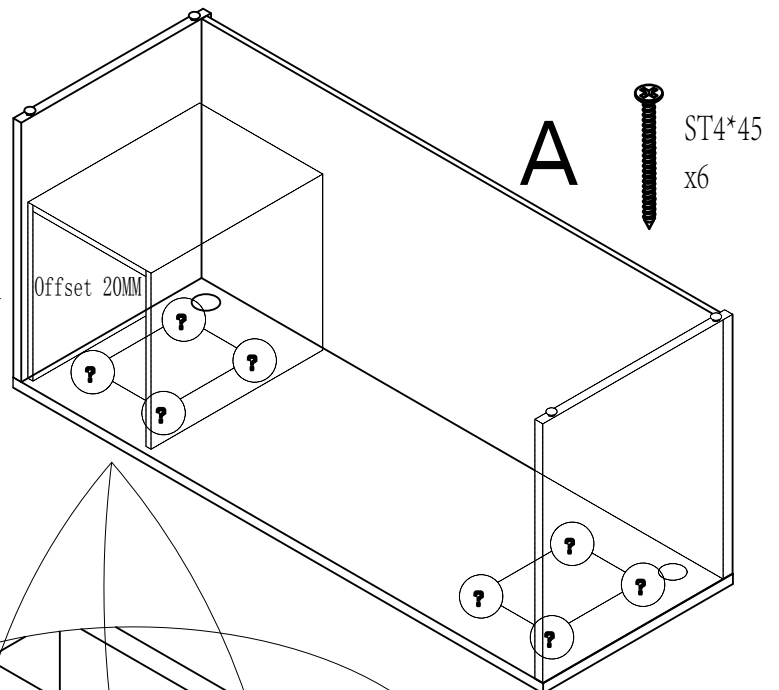

If the underside of the worksurface panel has **BOLT HOLES** as shown in figure B, Please use the 4 provided **BOLTS & WASHERS** to attach the pedestal to the left or right side of the panel. Secure the Pedestal by the 4 Larger **BOLT** holes in the Pedestal.

