



# Assembly Instructions

## PREP DOLLY


### Parts and Hardware

					
<b>A</b> Base (1 pc)	<b>B</b> Handle bar (1 pc)	<b>C</b> Caster with Locking Mechanism (2 pcs)	<b>D</b> Caster without Locking Mechanism (2 pcs)	<b>①</b> Screw M8*35 (4 pcs)	<b>②</b> Allen Wrench (1 pc)


### Assembly

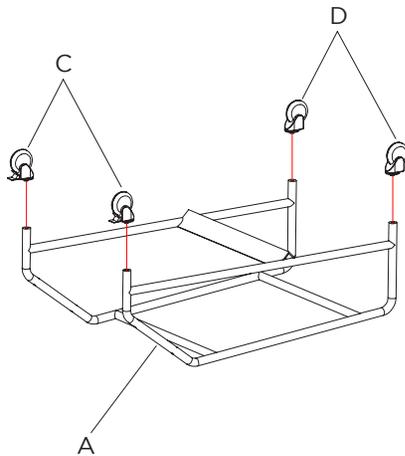

**Step 1**  
Insert the Casters with Locking Mechanism [C] in the back (closest to holes in the base) and Casters without locking mechanism [D] in the front. Push hard until you feel or hear the casters [C & D] snap into place.

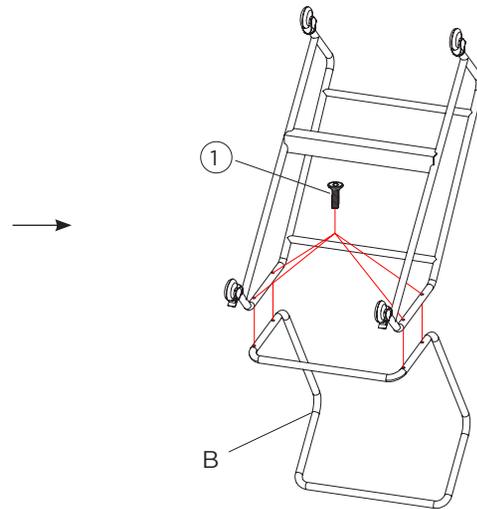

**Step 2**  
Attach the base [A] to the Handle Bar [B] using Screws [1] and tighten with Allen Wrench [2].

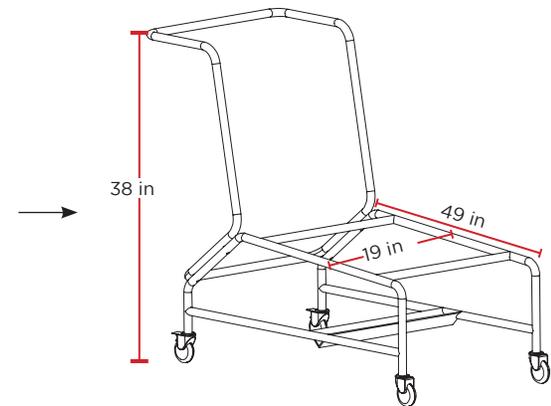

**Step 3**  
Flip over